



# Installation And Operating Manual

---

## American Style Fridge Freezer IK436DI.E (Dark Inox)



**Please read these instructions carefully before attempting to install or use this appliance.  
It is advisable to keep these instructions in a safe place for future reference.**

Iceking: Henry John House, Northway Industrial Estate, Northway Lane, Ashchurch, Tewkesbury, Gloucestershire,  
GL20 8JH. T: 01527 888133 E: [enquiries@ice-king.co.uk](mailto:enquiries@ice-king.co.uk) W: [www.ice-king.co.uk](http://www.ice-king.co.uk)

# Introduction

Thank you for choosing this ICEKING appliance. It has been designed to give years of trouble-free use provided it is installed and maintained correctly.

Please read these instructions carefully before installing or using your appliance. It is advisable to keep your purchase and installation receipts with these instructions in a safe place for future reference. Included is some important safety information in addition to guidelines and recommendations that will enable you to take full advantage of all the functions available.

This quality appliance has been tested and certified to meet all applicable UK electrical and safety standards.

This appliance must be installed and connected in accordance with current regulations by a qualified electrician. After unpacking the appliance ensure that there is no visible damage.

If the appliance has been damaged during transit, do not use it, contact your retailer immediately.

# Table of Contents

## Warning

Warning-----	2
--------------	---

## Safety and warning information

Basic safety symbol-----	5
Appliance connection -----	5
Safety and warning information-----	5

## Product Introduction

Product features-----	9
Product components-----	10
Installation dimension-----	11

## Installation

Transport-----	12
Place environment -----	12
Adjust plastic feet-----	12

## Operation

Before using -----	13
Starting and functions setting -----	13
Control panel -----	13
Freezer compartment settings -----	14
Refrigerator compartment settings -----	14
Unlock(3s) -----	14
Refrigerator chamber -----	15
Freezing chamber -----	16
Storage of foods -----	17
Energy saving tips -----	17

## Maintenance

Defrosting -----	18
Cleaning -----	18
General information -----	18
Normal phenomena -----	19
Trouble shooting -----	20

## Warning

- ⚠ CAUTION This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

The refrigerant isobutene(R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable.

During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged.

The refrigerant (R600a) is flammable.



Symbol ISO 7010 W021 Warning;  
Risk of fire/flammable materials

1. WARNING: The appliance must be positioned so that the plug is accessible.
2. WARNING: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
3. WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

## Warning

4. WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
5. WARNING: Do not damage the refrigerant circuit.
6. WARNING: Do not use electrical appliances in side the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
7. WARNING: This unit is using R600a as the Refrigerant and cyclopentane as Foaming agent, both of these two kinds of material are easy to be burnt, so the abandoned unit should be away from the fire, and can not be treated with fire.
8. WARNING: Danger of electrical shock, the yellow-green earthing of this appliance must be earthed before operation.
9. WARNING: Refrigerator discarded after the need for disposal according to local laws and regulation.
10. WARNING: The refrigerant and insulation blowing gas are flammable. When disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose to flame.
11. WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.
12. WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
13. WARNING: To avoid contamination of food, please respect the following instructions.
  - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
  - Clean regularly surfaces that can come in contact with food and accessible drainage systems.
  - Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.

 
## Warning

\*Two-star(\*\*) frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.

\*One star(\*), two star(\*\*) and three star(\*\*\*) compartments are not suitable for the freezing of fresh food.


-If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

\*Please depend on the actual situation of the product.

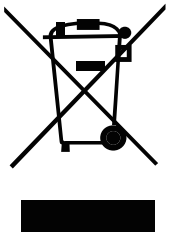

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

 To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

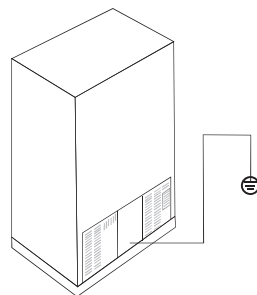

# Safety and warning information

## Basic safety symbol

This guide contains many important safety messages. Always read and obey all safety messages.



This is the safety alert symbol. It alerts you to safety messages that inform you of hazards that could be fatal or hurt you or others or cause damage to the product. All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING, or CAUTION. These words mean:



**DANGER**

You could be seriously injured if you don't follow the instructions.



**WARNING**

You could be seriously injured if you don't follow the instructions.



**CAUTION**

Indicates an imminently hazardous situation which if not avoided, may result in minor or moderate injury or product damage only.

## Appliance connection



**CAUTION**

This product is applicable to 220-240V/50Hz only, and the allowable voltage fluctuation range is 187V~242V. It can not be used if the voltage frequency is not 50Hz.

In order to ensure safety, the socket and its cable must be able to withstand the current of above 10A.

## Safety and warning information

To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following.

Read all instructions before using this appliance.

# Safety and warning information

## Safety and warning information



Do not damage the refrigerant circuit.  
Refrigerant will cause serious injury when it splashing into the eyes. If it happened please go to hospital immediately.

Keep ventilation openings, in the appliance enclosure or in the built-in structure clear of obstruction.

Do not use electrical appliance inside the food storage chambers of the appliance, unless they are of the type recommended by the manufacturer.

Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

The refrigerant and insulation blowing gas are flammable. When disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose to flame.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.



Do not use or store inflammable materials ether, benzene, alcohol, medicine, LP gas, spray or cosmetics near or in the fridge. It may cause explosion or fire.

Do not put glassware in freezing chamber or refrigerator chamber air outlet, it may cause explosion or hurt.

Make sure of grounding.

Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

The incorrect grounding may cause breakdown and electric shock.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

 
 
 
 
 
This appliance is intended to be used in household and similar applications such as

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.



# Safety and warning information





## Safety and warning information

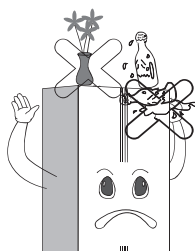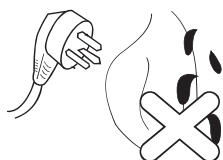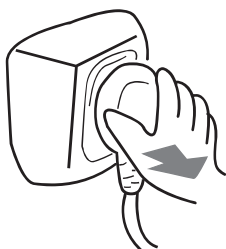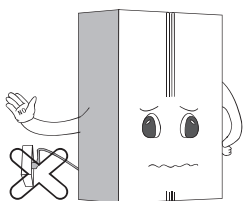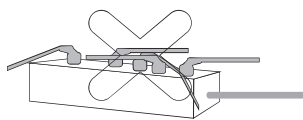

- A separate mains socket should be used to power this fridge freezer. Please do not use a multi socket as this could pose a fire hazard.
- Install the appliance in a dry, well ventilated room.
- The appliance should be place close to socket, it is easy to cut off the power supply at the time of the accident.
- Do not allow the power plug to face upward or to be squeezed at the back of the fridge. Water may be flown into or the plug may be damaged, which causes fire or electric shock.
- Do not allow the power cord to be bent or caught under heavy objects as this could cause significant damage. If it is damaged, it must be replaced by a service agent or a similarly qualified person in order to avoid a hazard.
- Unplug the power plug when cleaning and/or handling the interior lamp of the fridge as it may cause an electric shock or injury. If the LED lamp housing is damaged, it must be replaced by the manufacturer or a qualified service agent.
- Remove water or dust from the power plug with dry clean cloth, do not use wet hands touch it and insert it with the ends of the pins securely connected.
- Do not touch food or containers in the freezer with wet hands. It could cause frostbite.
- Do not place heavy objects or the dangerous objects such as cups, flower vases, cosmetics, medicine or any container with water on the fridge. It could cause injury when opening the door.
- Do not spray water at the outside or the inside of the fridge or do not clean it with benzene or thinner.

# Safety and warning information
    
## Safety and warning information

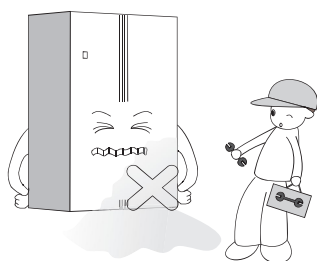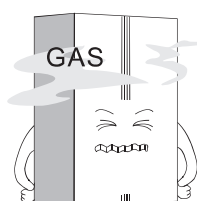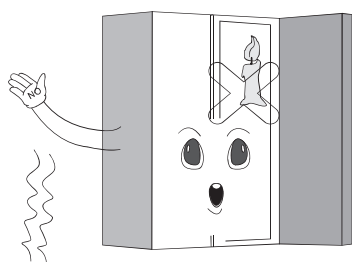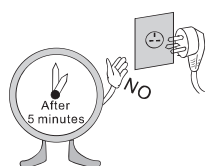

- Wait for 5 minutes or longer when reconnecting the plug. It may cause the operation of the freezer to fail.
- Do not use the fridge for non-domestic purpose (storing medicine or testing material, blood etc.) It may cause an unexpected risk such as fire, electric shock, deterioration of stored material or a chemical reaction.
- Do not use any electrical item to dry the inside, nor light a candle near the fridge to remove odor. It may cause an explosion or fire as the appliance contains flammable gas.
- Do not cling to the door or any of the parts within. It could not only cause the fridge freezer to tip, but could cause injury to yourself. More importantly, do not allow the children to do any of above also.
- If you can smell a gas leak, do not touch the fridge or the outlet and ventilate the room immediately. The explosion by spark may cause fire or burn. If gas is leaking due to severe damage during delivering, installing or during use, any spark may cause fire or burn. Please consult customer services asap on 0333 234 473.
- Do not insert your hands or any objects into any parts of the fridge freezer as this may cause electric shock or injury.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not install the fridge freezer in any place that can get wet or in an outside environment. This product is meant to be installed in a kitchen or utility room or any places where there is no sudden change of temperature or are prone to getting wet.
- Do not allow any person except the qualified engineer to disassemble, repair or alter the fridge freezer. It may cause injury, electric shock or fire.

# Product Introduction

## Product features

- **Energy saving and noise reduction**

This product has a super freeze function, energy saving modes, noise reduction & an optimal refrigeration system to achieve better efficiency.

- **Precise temperature control**

Microcomputer control system separate to set, control and display the R-temperature and F-temperature, more precise control.

- **Automatic defrosting**

Special program to reduce the temperature fluctuation of the fridge, it's for keeping food fresh.

- **LED display and touch button**

Control board respectively display refrigerator and freezer chamber temperature setting and functional status; touch button operation is convenient.

- **Door-opening alarm system**

If more than 1 minute door-opening, alarm system will remind you to close the door.

- **Tempered glass.**

The tempered glass is safe and reliable, easy clean and durable.

- **Easy clean and removable door seal**

 
The door seal is easy to clean and removable, extending the life of your product.

# Product Introduction

## Product components

All figures in this manual are schematic; some features and devices may not be consistent fully with your refrigerator and the specific structure and configuration shall be subject to the actual product.

The appearance and specifications of the actual product may differ depending on the model.

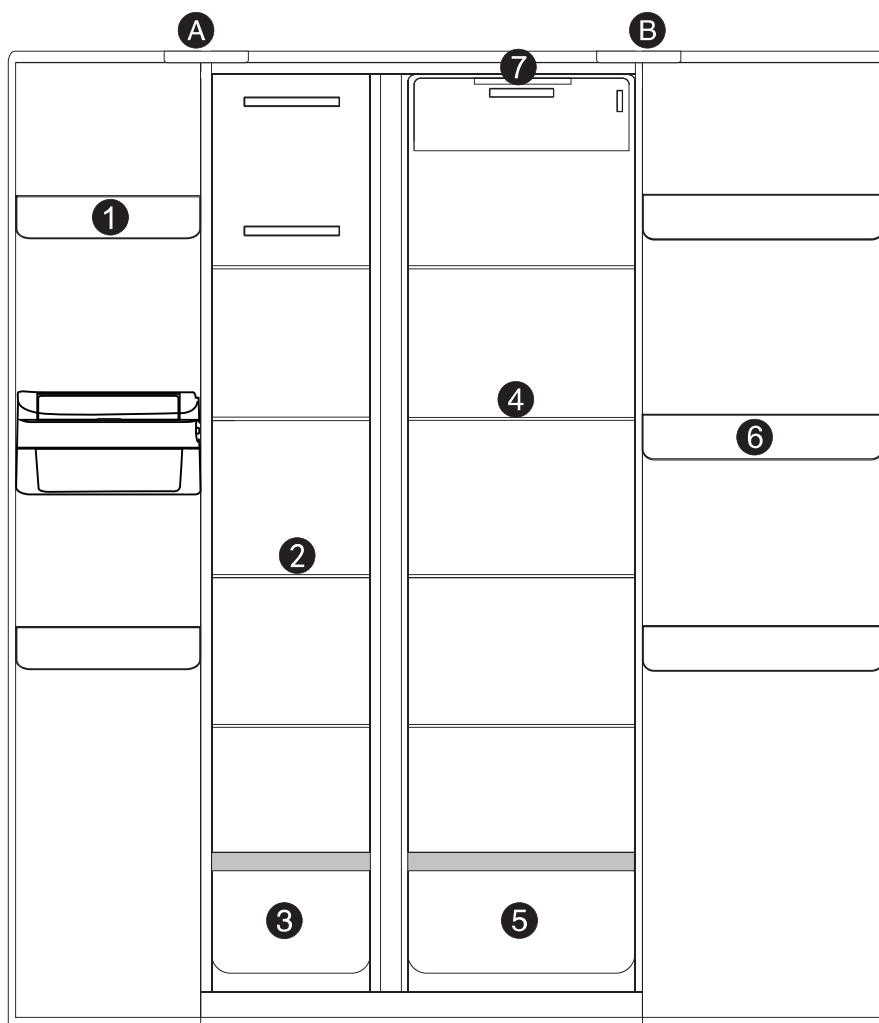

### A: Freezer compartments

1. Freezer door tray
2. Freezer glass shelves
3. Freezer drawer

 
### B: Refrigerator compartments

4. Refrigerator glass shelves
5. Refrigerator drawer
6. Refrigerator door tray
7. Control panel

# Product Introduction

## Installation dimension

Select a good location to place your appliance where it is flat and easy to use. Avoid placing the unit near heat sources, direct sunlight or moisture.

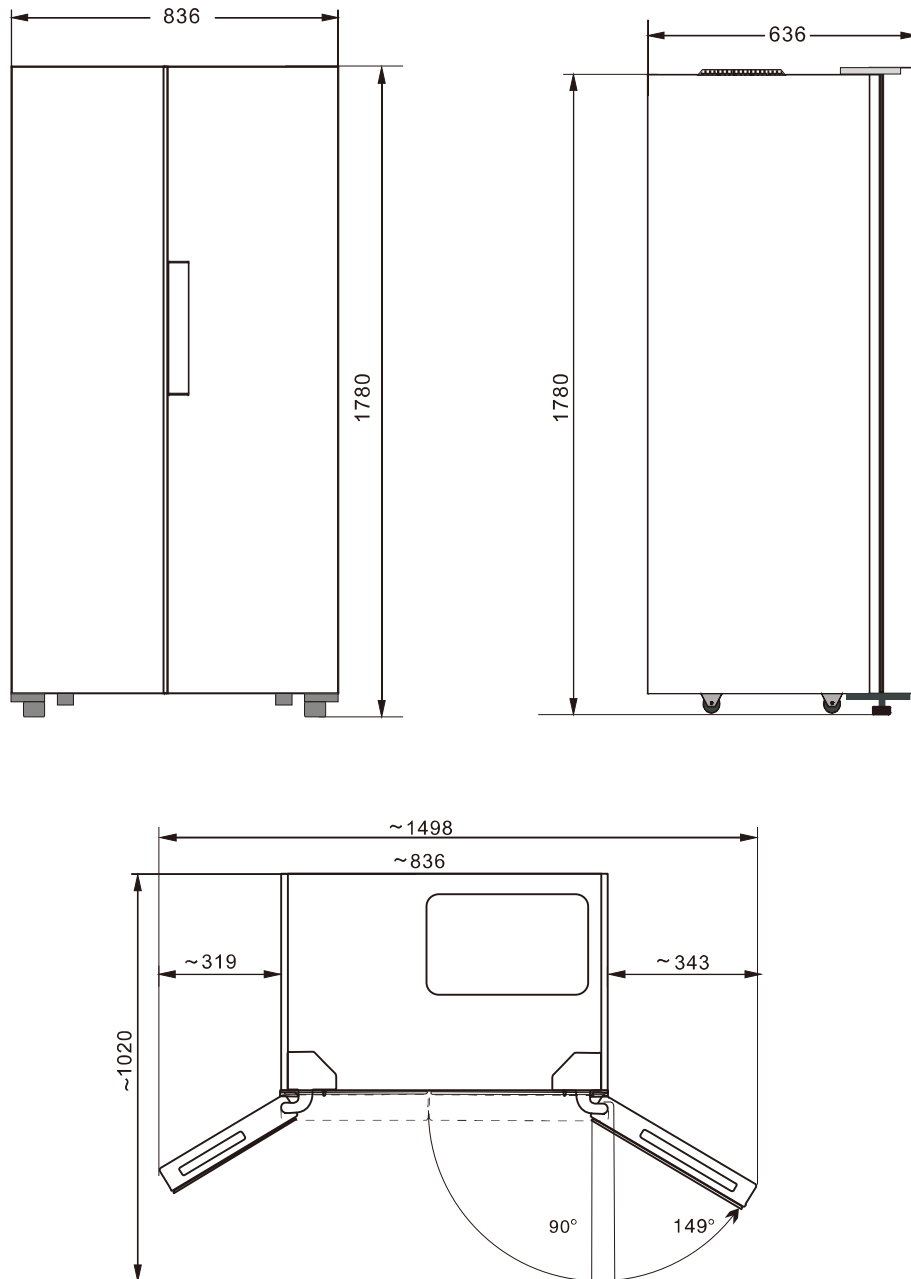


The figure above is schematic for installation only, not representing the actual product. The specific dimension shall be subject to the product that you have bought.

- To ensure proper air circulation around the fridge, please maintain sufficient space. If install the top panel or closet, please maintain sufficient space to move when necessary.


# Installation
 
## Transport

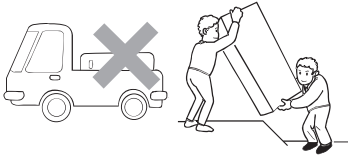


- Do not carry the refrigerator horizontally or reversely.
- Do not carry the refrigerator by holding the door or handle; the refrigerator shall be carried by lifting the bottom & a minimum of a 2-3 man lift is advised.

## Place environment

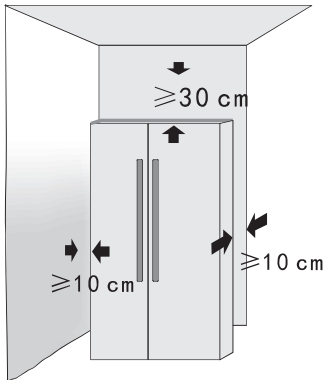 

- The refrigerator must be placed on a hard, flat ground; if cushioning is needed, stable, hard, nonflammable cushion blocks shall be used, rather than pushing the fridge freezer back tight to the wall or surface.
- The refrigerator shall be kept away from damp locations where water is easy to splash; water or dirt shall be removed with soft cloth regularly to prevent rusting which may have an effect on the electrical characteristics.
- Place the refrigerator in a well-ventilated place, reserve a certain space around and behind the refrigerator, and do not cover or block the air grille on the rear cover plate of compressor at the back of refrigerator; Keep the refrigerator away from heat source or direct sunlight.

## Adjust plastic feet

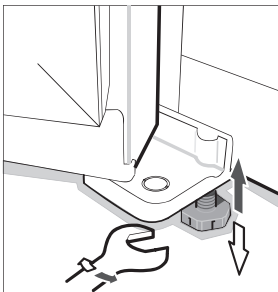 

- When the refrigerator stays in the packing box, plastic feet are in tightened state. After carrying it out from the packing box for placement, please make sure to adjust two front plastic feet until the height is suitable; just adjust two plastic feet with a wrench or directly by hand.
- Plastic feet and rear rollers must touch the ground to prevent the refrigerator from movement, vibration or noise. When moving the refrigerator, adjust plastic feet counterclockwise to keep them off the ground, and then push the refrigerator gently to move it.

# Operation

## Before Using

- Remove all packages, including the foam support at the bottom of refrigerator and the tapes fixing accessories in the box.
- Place the refrigerator in a steady position and adjust the feet to level it. It is better to clean the refrigerator before use.
- Remove the film: There is a layer of transparent film on the panel of our product, which can protect products from being scratched in the process of production and transportation, and you can choose to reserve or remove the film as needed.
- Place the refrigerator and adjust to desired level, clean it, let the refrigerator stand for about 2 ~ 6 hours to allow the gas to settle and then turn power on, ensuring the refrigerator is operating normally.

## Starting and function setting

 
### Starting

- Connect the power cord and turn on the power switch.
- Upon startup for the first time, the screen will display respective set temperature values (the temperature of refrigerator is set as 3°C, temperature of freezer is set at -19°C)

### Function setting of LED display

- The default mode is energy saving upon startup: The screen displays for 20s and then goes off. This mode is used to save energy and prolong the service life of LED lights.

## Control panel

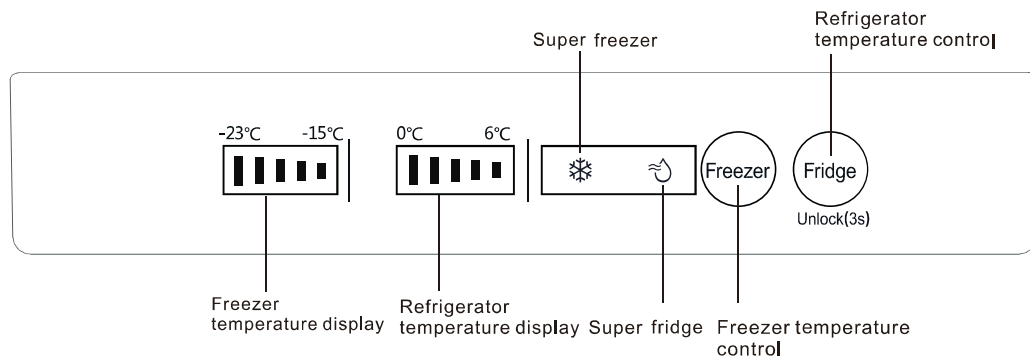

# Operation

## Freezer compartment settings

- The default temperature of the freezer is -19°C. To change the temperature press the “Freezer” button to cycle through the set temperatures.

 
-15°C → -17°C → -19°C → -21°C → -23°C → ❄️



**Freezer**



Set Temperature

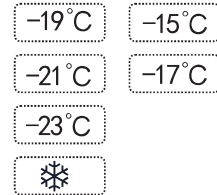

**CAUTION:** Do not put fresh foods directly on frozen foods at any time.

## Refrigerator compartment settings

- The default temperature of the refrigerator is 3°C. To change the temperature press the “Fridge” button to cycle through the set temperatures.

 
6°C → 4°C → 3°C → 2°C → 0°C → ❄️



**Fridge**



Set temperature

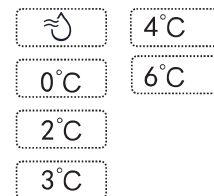

## Unlock(3s)

**Fridge**

 


- To unlock the child lock, long press “Fridge ” button for 3 seconds to unlock. If there is no operation within 20 seconds, the display will automatically go off.



# Operation

## Refrigerator Compartment

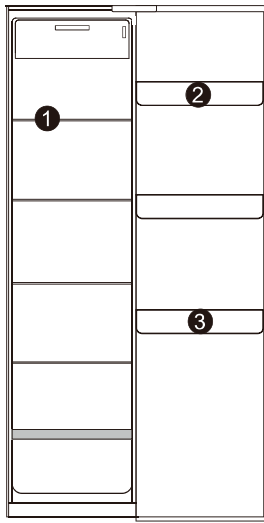


### ■ Food storage in the refrigerator.

The refrigerator is suitable for storing fruits, vegetables, drinks and other fresh foods. It is suggested to seal or wrap all open food stuffs and then put them into the refrigerator.


Suggested sections of refrigerator chamber for various foods and variety name:

 - ① **Glass Shelf:** Meats, fish, packet foods, cartons etc.
- ② **Top Tray:** Dairy products, jars & odorous foods etc.
- ③ **Bottle Rack:** Bottles, cartons & thin packet foods etc.

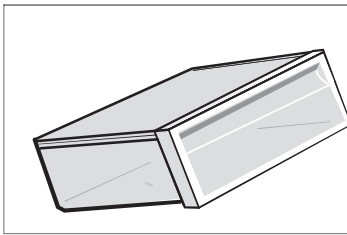


### ■ Fruit and vegetable box

 The refrigerator has a fruit and vegetable box, which can retain the moisture of fruits and vegetables and keep the humidity of the box well.

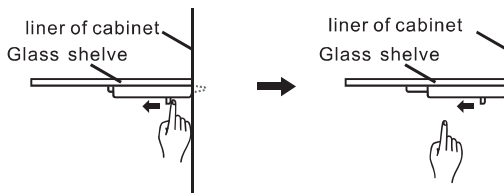

### ■ Glass shelves

 When removing the glass shelf, please press the movable pin under the shelf with both hands and push inward at the same time. Then the glass shelf can be easily removed.

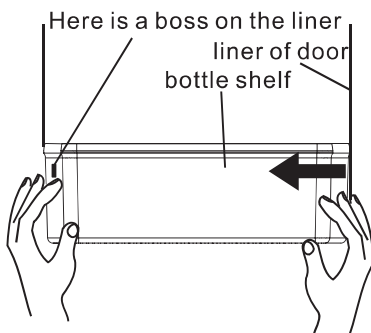


### ■ Bottle Shelf

**Disassembly:** Hold both sides of the bottle shelf with both hands. Push it from the side without the boss and push it inward as the direction of the arrow. When pushing hard, please note that the buckle on the edge of bottle shelf is separated from the groove of the liner. Then bottle shelf can be removed.

**Installation:** Hold both sides of the bottle shelf with both hands. Install the buckle of the boss side at first. Then push the other side inward slightly, the buckle can be fixed.

# Operation
 
## Freezer Compartment

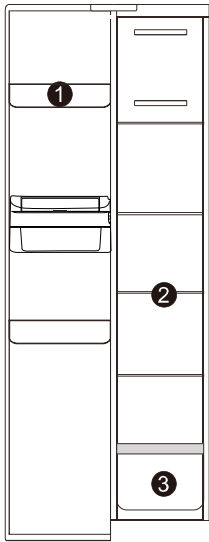


- **The freezing chamber is used to freeze foods, store deeply frozen foods and make ice cubes.**

**It can preserve foods for 3-6 months** (please consult instructions on food packets for more formal information.)

The freezing chamber is suitable for retaining the freshness of foods for a long time. When storing meat, it is suggested to cut the meat into pieces which are easy to take out, and mark the freezing date to prevent foods from exceeding the time limit.

Suggested sections of freezing chamber for various foods and variety name.

 - ① **Upper Bottle Rack:** Small frozen articles such as boxes or packets.
- ② **Glass shelves:** Frozen foods, such as fishes, meats and ice creams.
- ③ **Drawer:** Packaged frozen foods etc.

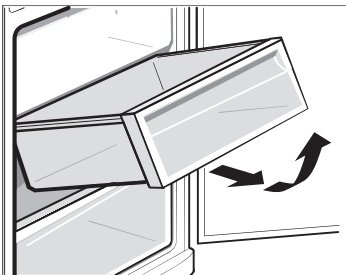

- **Drawer of freezer**

The upper drawer of the freezer compartment can freeze and store a large volume of foods. The lower drawer is mainly used to store smaller frozen foods.



### CAUTION

For food, especially oily food which is stored in the refrigerator, please avoid the direct contact with the liner. When the interior stained with oil or oily food soup stains should be cleaned immediately to avoid the long contact with the liner which may lead to liner corrosion and/or cracking.

# Operation

## Storage of foods



### CAUTION

#### Instructions for storing foods

- When storing frozen foods, place them fully inside of the freezer compartment rather than the side racks on the door of the freezer.
- Do not put bottled or canned foods into the freezer to prevent frost cracking.
- Before putting hot foods into the refrigerator, cool them to room temperature first as this can help bacteria to form and could make the food unsafe for consumption.
- Mark the freezing date on the packaging bag according to different storage lives of foods, so as to prevent foods from exceeding the time limit.
- Divide foods into proper pieces and package them separately, which are easy to freeze thoroughly and will not get frozen together.
- The packaging materials shall be odorless, airtight, watertight and pollution-free, so packaged foods are not easily tainted by other odors.
- Do not put too many fresh foods into the freezer at once, preferably not exceeding the freezing capacity value of refrigerator.
- Defrosted foods can not be frozen again, unless they are made into dishes; otherwise the quality will be affected.
- Glass bottles or glass containers shall not be placed into the freezer or at the air outlet of refrigerating chamber duct; as they could possibly explode.
- Foods can not block the air outlet as the air flow will be severely effected.

## Energy saving tips

- Make sure to keep the fridge freezer away from heat sources and/or direct sunlight.
- Before storing hot foods, cool them to room temperature and then put into refrigerator.
- Close the door timely, reduce the opening frequency, and shorten the opening time.
- When defrosting frozen foods, you can put them into the refrigerator, which will assist in the defrosting of the foods. alternatively, you can defrost on the counter if supervised.
- Make sure that the temperature sensor is not covered or blocked by foods, and keep proper distance between food.

# Maintenance

## Defrosting

**This fridge freezer has an automatic defrosting function, which cannot be overridden manually.**

## Cleaning

### Precautions for internal and external cleaning of refrigerator:

- Before cleaning, always turn off the power switch, disconnect the power plug.
- During cleaning, make sure that no water will enter the switch, control panel, door lamp or top control box.
- Remove dirt from the outside of refrigerator with a mild, non-abrasive cleaner, then wipe with a clean soft cloth and let the refrigerator dry naturally.
- When cleaning door sealing strip, always use clean water, wipe with dry cloth and let it dry naturally. Wet soft cloth with warm water or neutral cleaner to wipe the refrigerator body except the door sealing strip.
- It is forbidden to flush the refrigerator directly with water, which will affect electrical insulation properties, etc.
- It is forbidden to clean the refrigerator with metal wipers, wire brushes, coarse abrasive cleaners, strong alkaline detergents, or flammable or toxic cleaning fluids.

**After cleaning, please re-connect the plug to your power source.**

## General information

### On vacation

- When you want to leave for vacation, you are better to allow the refrigerator to operate continuously, maybe on a lower setting and leave foods that can be stored for a short time if the dates on the food packets allow. If you want to stop the refrigerator, remove all foods, disconnect the power plug, clean the inside of refrigerator fully, and open the door to avoid producing abnormal odors.

### At power failure

- Generally, short-term power failure will not affect the temperature of the refrigerator sharply. However, if power failure lasts for a long time, you shall reduce the opening frequency of refrigerator, and shall not put fresh foods into the refrigerator (prevent rise in the temperature of refrigerator from speeding up).
- If you know power failure is coming, you can turn on the "Super Freezer" function in advance to keep the temperature of refrigerator to the lowest value.

### Shutdown

- Generally, it is not suggested to stop the fridge freezer or turn off the power switch; otherwise the life expectancy of refrigerator may be affected.

# Maintenance

## Normal phenomena

- **Button failure**

Please check the control board first to check if the appliance is in child lock mode. When child lock is on, you will not be able to operate the buttons until you turn the lock off.
- **Low voltage, the compressor can't start**

You should purchase pressurizer of more than 1000W when the area of the appliance installation, that's better to protect your fridge.
- **Long time to start**

When the ambient temperature is too high, it will take a long time to get to temperature.
- **The sides and middle beams of the appliance feel hot**

The sides and middle beams of the appliance can feel hot after a period of time. Especially when you have first connect the appliance. This is normal. The appliance will be trying to get to temperature so it will take more energy/power to do so, hence feeling hotter than normal.
- **Dew drops**

When external air flows into the cool inner surface of the fridge, dew drops can be formed.  
If the humidity of the installed location is high or during the rainy season, dew drops can form on the outer side of the fridge. This is a natural phenomenon that occurs during the humid weather, Wipe the water drops with a dry cloth.
- **Noise**

When you operate the fridge for the first time, the fridge will operate at high speed to cool fast and the sound can seem louder. When the internal temperature falls below a certain level, the noise will subside.  
When the operation of the compressor is starting or ending; various parts expanding/contracting or various control devices operating or temperature change within the fridge, you will hear the sounds, these are normal sounds.
- **Compressor can be hot during operation**

During operation, the temperature of the compressor can become hot. Please do not touch the compressor as it could cause serious injury.

# Maintenance

## Trouble shooting

Before calling for service, review this list. It may save you both time and expense. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance.

<b>Fault</b>	<b>Possible Cause(s)</b>	<b>Action Required</b>
No display shown on the control panel.	The mains plug is not in the socket properly or not switched on. Alternatively it could be the fuse.	Checked the power socket is switched on. Also check fuse and replace if required. If still no power, please contact service.
The alarm has sounded	Door is slightly ajar or you have had the door open for more than 1 minute	Close the door to stop the alarm.
The compressor is not working	The thermostat has clicked out whilst maintaining temperature or the power is not connected properly.	This is normal for the thermostat to click in and out. If this is not the issue, check the power supply. if still no noise from the compressor please contact service.
Compressor runs for what seems too long a period	The fridge may have recently been disconnected for a period of time. You have put too much fresh food in at one time or you have placed hot food in the fridge. Doors are opened too frequently or have been left open for a period of time.	It can take a longer period of time for the fridge or freezer to get back to temperature so the compressor will run for a longer period. Hot food will cause the temperature to go up in the fridge so the compressor will work harder to get back to temperature. Warm air entering the fridge will enable the compressor to work harder to get back to temperature.
Vibrating noise	Floor is uneven or not steady due to the type of flooring. Items placed on top of the fridge or bottles touching inside the fridge are vibrating. The appliance is touch a wall or surface.	Be sure the floor is level where the appliance is or check the feet of the appliance to make sure it is level. Remove items from the top or from the fridge. Make sure the appliance is not touching any surfaces or wall.

**Your 2 year Manufacturer's guarantee  
THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.**

Your new **Iceking** appliance carries a free guarantee which protects you against the cost of repairs during the first 24 months from date of purchase provided that: Any claim is accompanied by evidence of the model reference, model serial number and proof of purchase, such as a Sales Receipt, showing that the appliance was purchased within the 24 months prior to the date of claim.

**What is not covered under the Guarantee:**

- Any appliance not correctly installed and operated in accordance with the manufacturer's instructions.
- Any appliance that is used for anything other than domestic purposes.
- Any defect caused by accident, misuse, unauthorized modification or inexpert repair.
- Cost of Call-out where a fault cannot be found with the appliance.
- Cost of Call-out for work covering routine maintenance, such as, but not exclusively, cleaning of filters or defrosting.
- Cost of Call-out for work required to correct the alignment of doors following door reversal procedures carried out by you.
- Use of the appliance by anyone other than the Householder. Use in any commercial environment.
- Consumable items, such as, but not exclusively, fuses in plugs, bulbs and breakable items which require routine replacement.
- Repair costs incurred that have not been authorised by Iceking and/or carried out by a non-approved Iceking engineer.

**YOUR GUARANTEE IS VALID ONLY IN THE UK & ROI.**

To Register your Appliance simply complete the card in your appliance pack and return it with a stamp affixed or *Alternatively* you can Register online at [www.ice-king.co.uk/register-your-product/](http://www.ice-king.co.uk/register-your-product/)

**SERVICE HELP-LINE**

Should your appliance develop a fault, please call the Iceking Service Helpline on:

**03331 210023**

Please remember to have all your product details available, including the model number, serial number, date of purchase and your retailer's details before registering a fault.

Your service call cannot progress without this information.

**! Insurance ! Any warranty provided with this product does not cover loss of**  
fridge/freezer content.

Any claim for loss, damage, costs or expenses of an indirect or consequential nature including any economic loss or damage to foodstuffs or any other goods is excluded. We recommend that you inspect your fridge/freezer regularly to check that it is working correctly, losses can result from deterioration following breakdown or accidental failure of the appliance, fuses, plugs or public electricity supply, these can be covered by your standard home insurance or might require extra cover. Check with your insurance provider.

**Important Note:**

This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



The symbol on the product, or on the documents accompanying the product, the Crossed Out Wheelie Bin, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local authority, your household waste disposal service or the retailer where you purchased the product.

We continuously try to improve our products for the benefit of our customers. For this reason we reserve the right to make changes to any product at any time, without notice.