



**Installation and Operating Manual**  
**Chest Freezer Model CF100WE**



**Please read these instructions carefully before attempting to install or use this appliance.**

**It is advisable to keep these instructions in a safe place for future reference.**

Iceking: Henry John House Northway Industrial Estate Northway Lane Ashchurch Tewkesbury  
Gloucestershire GL20 8JH T: 01527 888133 E: [enquiries@ice-king.co.uk](mailto:enquiries@ice-king.co.uk)

W: [www.ice-king.co.uk](http://www.ice-king.co.uk)

## **INTRODUCTION:**

Thank you for choosing this ICEKING appliance. It has been designed to give years of trouble-free use provided it is installed and maintained correctly.

Please read these instructions carefully before installing or using your appliance. It is advisable to keep your purchase and installation receipts with these instructions in a safe place for future reference.

Included is some important safety information in addition to guidelines and recommendations that will enable you to take full advantage of all the functions available.

This quality appliance has been tested and certified to meet all applicable UK electrical and safety standards.

This appliance must be installed and connected in accordance with current regulations by a qualified electrician.

After unpacking the appliance ensure that there is no visible damage. If the appliance has been damaged during transit, do not use it, contact your retailer immediately.

### **Iceking Registered Office Address:**

**Henry John House,  
Northway Industrial Estate,  
Northway Lane, Ashchurch, Tewkesbury,  
Gloucestershire, GL20 8JH**

## **CONTENTS:**

**Section 1. Safety Instructions**

**Section 2. Parts & Features**

**Section 3. Installing your Freezer**

**Section 4. Freezer Features & Use**

**Section 5. Food Storage Basket**

**Section 6. Defrosting & Draining**

**Section 7. Cleaning & Maintenance**

**Section 8. Troubleshooting**

**Section 9. Disposal & Recycling of the Product**

**Section 10. Guarantee**

## SECTION 1: SAFETY INSTRUCTIONS



**THIS PRODUCT IS FOR HOUSEHOLD USE ONLY!**

This appliance is intended strictly for storing food only.

If the appliance, when unpacked, is damaged please contact your retailer immediately.

The mains electricity supply must conform to the rating plate of the appliance.

PLEASE TAKE NOTE OF FIRE WARNING SYMBOL;

ISO 7010 W021



### **WARNING!**

*When using, servicing and disposing of the appliance, please pay attention to the symbol as seen above, this is located on the rear of the appliance (rear panel or compressor). This is a 'risk of fire warning symbol'. There are flammable materials in refrigerant pipes and the compressor. Please ensure this appliance is as far away as possible from any heat source.*

## **SAFETY INSTRUCTIONS (cont.)**

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision
- The appliance must be positioned so that the plug is accessible.
- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Keep the appliance power cord out of the reach of children under 8 years of age.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance, for flammable refrigerants is used in the freezer, please be careful when installing, handling, servicing and recycling the appliance.
- Regulations require the appliance to be earthed.
- It is recommended to check the supply cable regularly for any sign of deterioration, the appliance should not be used if the cable is damaged.
- Do not place multiple portable socket outlets or portable power supplies at the rear of the appliance.
- This appliance is fitted with an earthed plug. Please ensure that the wall socket in your house is well earthed.
- Make sure the appliance is turned off and unplugged before performing any cleaning or maintenance operations.
- Clean all surfaces that come into contact with food regularly with warm soapy water.

- Do not leave the lid open for long periods as this will cause the temperature inside the cabinet to rise and adversely affect the operation of the product.
- Raw meat and fish should be stored in suitable containers and kept away from each other.
- This appliance is intended to be used in household and similar applications.

### **Positioning:**

Install this appliance in a location where the ambient temperature corresponds to the climate class indicated on the rating plate of the appliance. For refrigerating appliances with climate class: —

- extended temperate: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C (SN)
- temperate: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C (N)
- subtropical: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C (ST)
- tropical: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C (T)

## SECTION 2: PARTS AND FEATURES



- 1 Recessed handle
- 2 Wheel (or adjustable foot)
- 3 Basket
- 4 Control panel
- 5 Drain hole



## **SECTION 3: INSTALLING YOUR FREEZER**

### **Unpacking Your Freezer:**

- Remove all packaging material. This includes the foam base and all adhesive tape holding the freezer accessories inside and outside.
- Inspect and remove any remains of packing, tape or printed materials before powering on the freezer.

### **Adjusting Your Freezer:**

- Your freezer is designed for freestanding installation only. It should not be recessed or built-in.
- Place the freezer on to a solid floor strong enough to support it fully loaded.
- When moving the freezer, never tilt it more than a 45-degree angle. This could damage the compressor and the sealed system.
- If the freezer is tilted let it stand in an upright position for at least 24 hours prior to switching on. This is to allow the refrigerant to settle.

## Location:

 
- To ensure your freezer works at the maximum efficiency it was designed for, you should install it in a location where there is adequate air circulation.
- The appliance should be installed well away from sources of heat such as radiators, boilers, direct sunlight etc.
- The following distances are recommended as minimum clearances around the freezer:

Sides.....4" (102mm)

Back.....4" (102mm)

Top.....DO NOT BLOCK

## Space Requirement

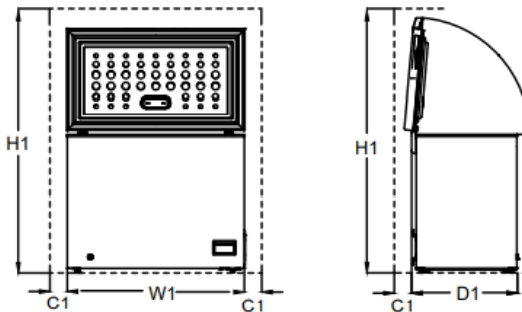

Space Required In Use				
	W1 / mm (Product Width)	D1 / mm (Product Depth)	H1 / mm (Minimum Height)	C1 / mm (Minimum Clearance)
	545	545	1450	100


## **SECTION 4: FREEZER FEATURES AND USE**

### **Operating Your Freezer**

- Set the temperature, on the temperature control knob. “MIN” being the warmest and “MAX” being the coldest. Initially set the temperatures on “NORMAL”.
- Place food inside the freezer after it has reached temperature. After running the freezer for 24 hours set the freezer to your desired setting.
- If the freezer is switched off or experiences a power cut, allow 5 minutes before plugging it back in and switching on.

### **General Features:**

- Setting: Press ‘SET’ button, select the temperature setting mode. The temperature indicator bar goes up by a sliding scale. The temperature can run from ‘MIN’ being the warmest to ‘MAX’ being the coldest
- Super freezing  
Press ‘SET’ button consecutive to enter ‘SUPER’ freezing mode from scale ‘MAX’, the indicator bar on the left hereby will turn dark whereas the indicator light of ‘SUPER’ turns on. The mode is automatically set in 5 seconds after the last press. The compressor will keep working in ‘SUPER’ freezing mode.
- If ‘SUPER’ mode keeps running for 52 hours and not stopped manually, the system will automatically cut out of this mode.
- Adjustable temperature: (see Figure 1)

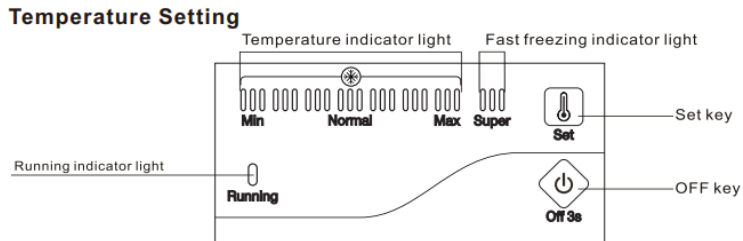 **Figure 1:**

## **Indicator Lights:**

- Temperature Indicator Light (Bright Blue): To adjust the temperature from Scale Min to Scale Max → N.B. Max is the Coldest.
- Super Freezing Indicator Light (Bright Blue): Light on = appliance in 'Super' mode; light off = 'Super' mode deactivated.
- Running Indicator Light (Bright Green): Light on = power to appliance; light off = no power to appliance.
- Light Indicator will reduce in intensity after 30 minutes.

 
## **Temperature Sensor Fault Alarm:**

- When there is a disconnection or short out of the temperature sensor, as a fault alarm, the temperature indicator bar will flash from left to right every 0.5 seconds.

## **SECTION 5: FOOD STORAGE BASKET**

### **Basket:**

- Your freezer has a removable basket which allows you to store food more accessibly or you can remove it altogether if not required.

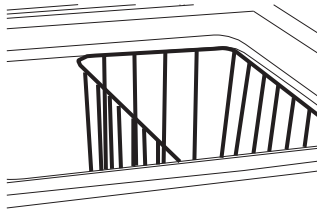

## **SECTION 6: DEFROSTING AND DRAINING**

### **SWITCH THE PRODUCT OFF AND REMOVE THE PLUG!**

- For the most efficient operation and minimum energy consumption, defrost whenever the frost becomes 1/4" thick. Never use a sharp metal instrument to remove the frost, as it may damage the cooling coils. (A punctured coil will void the warranty). Use only the plastic scraper provided. Do not use boiling water as it may damage the unit.
- Remove frozen food from the freezer and place it in a cool bag to protect the food.
- Unplug the unit. Defrosting usually takes a few hours. To defrost faster keep the lid open.

- For draining, place a tray beneath the outer drain plug. Unscrew and remove the drain plug. This will let the water flow out in to the tray. When done, screw the drain plug back in place.
- **Note:** monitor the container under the drain to avoid overflow.
- When draining is complete, wipe the interior of the freezer with a soft cloth. Plug in and switch on.
- Reset the temperature control to the desired setting.
- Return the food into the freezer.
- Wipe containers before storing to avoid spillage.
- Hot food should be allowed to cool before storing in the freezer. This will prevent unnecessary energy use.

### **Packaging Recommendations:**

- Plastic containers with air tight lids.
- Heavy duty aluminum foil containers
- Plastic wrap made from saran film & self-sealing plastic bags.
- Do not refreeze defrosted/thawed foods.
- It is recommended that the freezing date be marked on the packaging.
- When storing meats, keep in the original packaging or rewrap as necessary.
- Proper freezer storage requires correct packaging. All foods must be in packages, which do not allow the flow of air or moisture in, or out. Improper storage will result in odor and taste transfer and will result in the drying out of the food.
- Follow package or container instructions for proper storage.

## **SECTION 7: CLEANING AND MAINTENANCE**

**Switch off and unplug the appliance.**

### **Caution!!!**



**Before using cleaning products, always read and follow manufacturer's instructions and warnings to avoid personal injury or product damage.**

### **General:**

**IMPORTANT:** Ethereal oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from orange peel, butyric acid or cleanser that contains acetic acid

- Do not allow such substances to come into contact with the appliance
- Do not use any abrasive cleaners
- Remove the food from the freezer and store them in a cool place, well covered
- Switch the appliance off and remove the plug from the mains, or switch off or remove circuit breaker fuse
- Clean the appliance and the interior accessories with a cloth and lukewarm water. After cleaning, wipe with fresh water and rub dry
- Accumulation of dust around the condenser increases energy consumption. For this reason, carefully clean the condenser at the back of the appliance once a year with a soft brush or a vacuum cleaner
- After everything is dry place the appliance back into service

## **Lid Seals:**

- Clean the lid seals every three months according to general instructions. Seals must be kept clean and pliable to ensure a proper seal.

## **Product Care during Absences:**

- For long vacations, absences or moving home, remove the food from the freezer, unplug and clean the lid seals according to “General cleaning” section. Prop the lid open, so that air can circulate inside.
- When moving the product, always ensure that it is in a vertical position.
- Do not move the unit in a lying down/horizontal position as this may cause damage to the sealed system. In such cases, the damage is irreparable.

## **Normal Operating Sounds You May Hear:**

- Gurgling sounds or slight vibrations are the result of the refrigerant circulating through the cooling coils.
- The thermostat control will click when it cycles on and off.



## **SECTION 8: TROUBLESHOOTING**

Problem	Possible cause	Solution
Appliance dose not work	Mains plug is not plugged in or is loose	Insert mains plug.
	Fuse has blown or is defective	Check fuse, replace if necessary.
	Socket is defective	Mains malfunctions are to be corrected by an electrician.
Appliance freezes too much	Temperature is set too cold or the appliance runs at "7" setting.	Turn the temperature regulator to a warmer setting temporarily.
The food is not frozen enough	Temperature is not properly adjusted.	Please look in the initial Temperature Setting section.
	Door was open for an extended period.	Open the door only as long as necessary.
	A large quantity of warm food was placed in the appliance within the last 24 hours.	Turn the temperature regulation to a colder setting temporarily.
	The appliance is near a heat source.	Please look in the installation location section.
Heavy build-up of frost on the door seal.	Door seal is not air-tight.	Carefully warm the leaking sections of the door seal with a hair dryer (on a cool setting). At the same time shape the warmed door seal by hand such that it sits correctly.
Unusual noises	Appliance is not level.	Check the appliance and level it by some articles.
	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A component, e.g. a pipe, in the side of the appliance is touching another part of the appliance or the wall.	If necessary, carefully bend the component out of the way.

## **SECTION 9: DISPOSAL AND RECYCLING OF THE PRODUCT**

<b>CORRECT DISPOSAL OF THIS PRODUCT</b>	
	<p>This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE).</p> <p>By ensuring this product is disposed correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. The symbol on the product indicates that this product may not be treated as household waste. Instead it must be handed over to the appropriate/ applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.</p>

### **Precautions:**

**If the appliance is to be discard/recycled, you must remove the lid. This will reduce the possibility of danger to children. The flammable foaming needs to be disposed of by a professional company/person or your local council. We decline liability for any damage or accident derived from any use of this product which does not conform to the instructions contained in this booklet.**

## **SECTION 10: YOUR 2-YEAR MANUFACTURER'S GUARANTEE**

**THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.**

Your new **ICEKING** appliance carries a free guarantee which protects you against the cost of repairs during the first 24 months from date of purchase provided that: any claim is accompanied by evidence of the model reference, model serial number and proof of purchase, such as a Sales Receipt, showing that the appliance was purchased within the 24 months prior to the date of claim.

### **YOUR GUARANTEE IS VALID ONLY IN THE UK & Republic of Ireland**

**To register your Appliance simply complete the card in your appliance pack and return it with a stamp affixed or alternatively you can register online at [www.repairtechuk.com](http://www.repairtechuk.com)**

#### **SERVICE HELP-LINE:**

Should your appliance develop a fault, please call the Iceking Service Helpline on:

**01527-888133**

 
**Please remember to have all your product details available, including the model number, serial number, date of purchase and your retailer's details before registering a fault.**

**Your service call cannot progress without this information**

## **WHAT IS NOT COVERED UNDER THE GUARANTEE:**

- Any appliance not correctly installed and operated in accordance with the manufacturer's instructions.
- Any appliance that is used for anything other than domestic purposes.
- Any defect caused by accident, misuse, unauthorized modification or inexperienced repair.
- Cost of Call-out where a fault cannot be found with the appliance.
- Cost of Call-out for work covering routine maintenance, such as, but not exclusively, cleaning of filters or defrosting.
- Cost of Call-out for work required to correct the alignment of doors following door reversal procedures carried out by you.
- Use of the appliance by anyone other than the Householder.
- Use in any commercial environment.
- Consumable items, such as, but not exclusively, fuses in plugs, bulbs and breakable items which require routine replacement.
- Repair costs incurred that have not been authorised by Repairtech and/or carried out by a non-approved Repairtech engineer.

Iceking CF100WE  
GTIN-13 Bar Code

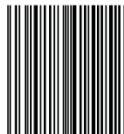

5 060217 415252