



RZ283I.E

No Frost Freezer in Inox

Installation and Operating Manual

Please read these instructions carefully before attempting to install or use this appliance. It is advisable to keep these instructions in a safe place for future reference.

User Instructions

RZ283I.E

No Frost Freezer in Inox

Contents

1. Safety Information	Page 1 – 8
2. Overview	Page 9
3. Installation	Page 10 – 17
4. User Control Panel	Page 18 – 20
5. Daily Use	Page 21 – 26
6. Guarantee	Page 27-28

Safety Information

⚠ Safety Information

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its tips and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

For the safety of life and property keep the precautions of these user instructions as the manufacturer is not responsible for damages caused by omission.

Children and Vulnerable People Safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 years are allowed to load and unload this appliance.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
- Keep all packaging well away from children. There is risk of suffocation.

If you are discarding the appliance pull the plug out of the socket, cut the connection cable as close to the appliance as you can and remove the door to prevent children or pets being trapped inside.

Safety Information

If this appliance featuring magnetic door seals is to replace an older appliance having a spring lock & latch on the door or lid, ensure that spring lock is unusable and not a danger before being discarded.

General Safety

WARNING!

Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING!

Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING!

Do not damage the refrigerant circuit.

WARNING!

Do not use other electrical appliances such as ice cream makers inside of refrigerating appliances unless they are approved for this purpose by the manufacturer.

WARNING!

Do not touch the light bulb if it has been on for a long period of time because it could be very hot.

WARNING!

When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING!

Do not locate multiple portable socket outlets or portable power suppliers at the rear of the appliance.

Safety Information

- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. The refrigerant isobutane (R600-a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable.
- During transportation and installation of the appliance, be certain that none of the components of the refrigerant circuit become damaged.
- Avoid open flames and sources of ignition. Thoroughly ventilate the room in which the appliance is situated.
- It is dangerous to alter the specifications or modify this product in any way. Any damage to the cord may cause a short circuit, fire and/or electric shock.
- This machine is for domestic use only; do not use it for other purposes. Commercial use will void the guarantee.



WARNING!

Any electrical components & plug, power cord, compressor etc., must be replaced by a certified service agent or qualified service personnel.



WARNING!

The light bulb supplied with this appliance is a special use lamp bulb usable only with the appliance supplied. This bulb is not usable for domestic lighting.

- The power cord must not be lengthened.
- Make sure that the power plug is not damaged at the rear of the appliance. A damaged power plug may overheat and cause a fire.
- Make sure that you can access the mains plug of the appliance.
- Do not pull the mains cable.

Safety Information

- If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire. You must not operate the appliance without the lamp.
- This appliance is heavy. Care should be taken when moving it.
- Do not remove or touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
- Avoid prolonged exposure of the appliance to direct sunlight.

Daily Use

- Do not put hot items on the plastic parts in the appliance.
- Do not place food products directly against the rear wall.
- Frozen food must not be refrozen once it has been thawed out.
- Store prepacked frozen food in accordance with the frozen food manufacturer's instructions.
- The appliance manufacturer's storage recommendations should be strictly adhered to.
- Refer to relevant instructions.
- Do not place carbonated fizzy drinks in the freezer compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.
- Ice lollies can cause frost burns if consumed straight from the appliance.
- To avoid contamination of food, please respect the following instructions:
 - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
 - Regularly clean surfaces that can come in contact with food and accessible drainage systems.

Safety Information

- Clean water tanks if they have not been used for 48 hours: flush the water system connected to a water supply if water has not been drawn for 5 days.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drips onto other food.
- Two-star frozen food compartments (if they are presented in the appliance) are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.
- One, two and three-star compartments (if they are presented in the appliance) are not suitable for the freezing of fresh food.
- If the appliance is left empty for long periods, switch off, defrost, clean, dry and leave the door open to prevent mould developing within the appliance.

Care and Cleaning

- Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.
- Do not clean the appliance with metal objects.
- Do not use sharp objects to remove frost from the appliance. Use a plastic scraper.
- Regularly examine the drain in the refrigerator for defrosted water. If necessary, clean the drain. If there is a fresh food storage compartment, if the drain is blocked, water will collect in the bottom of the appliance.

Installation

IMPORTANT!

For electrical connection carefully follow these instructions.

- Unpack the appliance and check if there is any damage to it. Do not connect the appliance if it is damaged. Report any damage immediately

Safety Information

to the retailer where you purchased the appliance. In that case retain the packaging.

- It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.
- Ensure your appliance has adequate air circulation, failure to do this may lead to overheating. To achieve sufficient ventilation, follow the instructions relevant to installation.
- Wherever possible the spacers of the product should be against a wall, to avoid the warm parts (compressor, condenser) touching any surfaces and causing possible burning.
- The appliance must not be located close to radiators or cookers.
- Make sure that the mains plug is accessible after the installation of the appliance.

Service

- Any electrical work required to service the appliance should be carried out by a qualified electrician or competent person.
- This product must be serviced by an authorised Service Centre and only genuine spare parts must be used.

Energy Saving

- Do not put hot food in the appliance.
- Do not pack food close together as this prevents air circulation.
- Make sure food doesn't touch the back of the compartments.
- If electricity goes off, do not open the doors.
- Do not open the doors frequently.
- Do not keep the doors open for too long.
- Keep the temperature at a moderate level during normal weather conditions.

Safety Information

- All accessories, such as drawers, shelves and balconies should be kept in place for lower energy consumption.

Environment Protection



This symbol on the product or on its packaging indicates that it must not be treated as household waste. It should be disposed of in accordance with local authority regulations or taken to the appropriate collection point for the recycling of electrical and electronic equipment.

Ensuring this product is disposed of correctly will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

This appliance does not contain gasses which could damage the ozone layer, in either its refrigerant circuit or insulation materials.

The insulation foam contains flammable gases. Avoid damaging the cooling unit, especially the heat exchanger.

The materials used on this appliance marked by the symbol are recyclable.

For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the retailer where you purchased the product.

Packaging Materials

- The materials with the symbol are recyclable.
- Dispose of the packaging in a suitable collection container to recycle it.

Disposal of the Appliance

Safety Information

1. Disconnect the mains plug from the mains socket.
2. Cut off the mains cable and discard it.

WARNING!


During use, service, and disposal of the appliance, please pay attention to the symbol similar to the one below, which is located on the rear of the appliance (rear panel or compressor) and yellow or orange in colour.



This is the risk of fire warning symbol. There are flammable materials in the refrigerant pipes and the compressor.

Please keep a safe distance between the appliance and fire sources during use, service, and disposal.

Overview

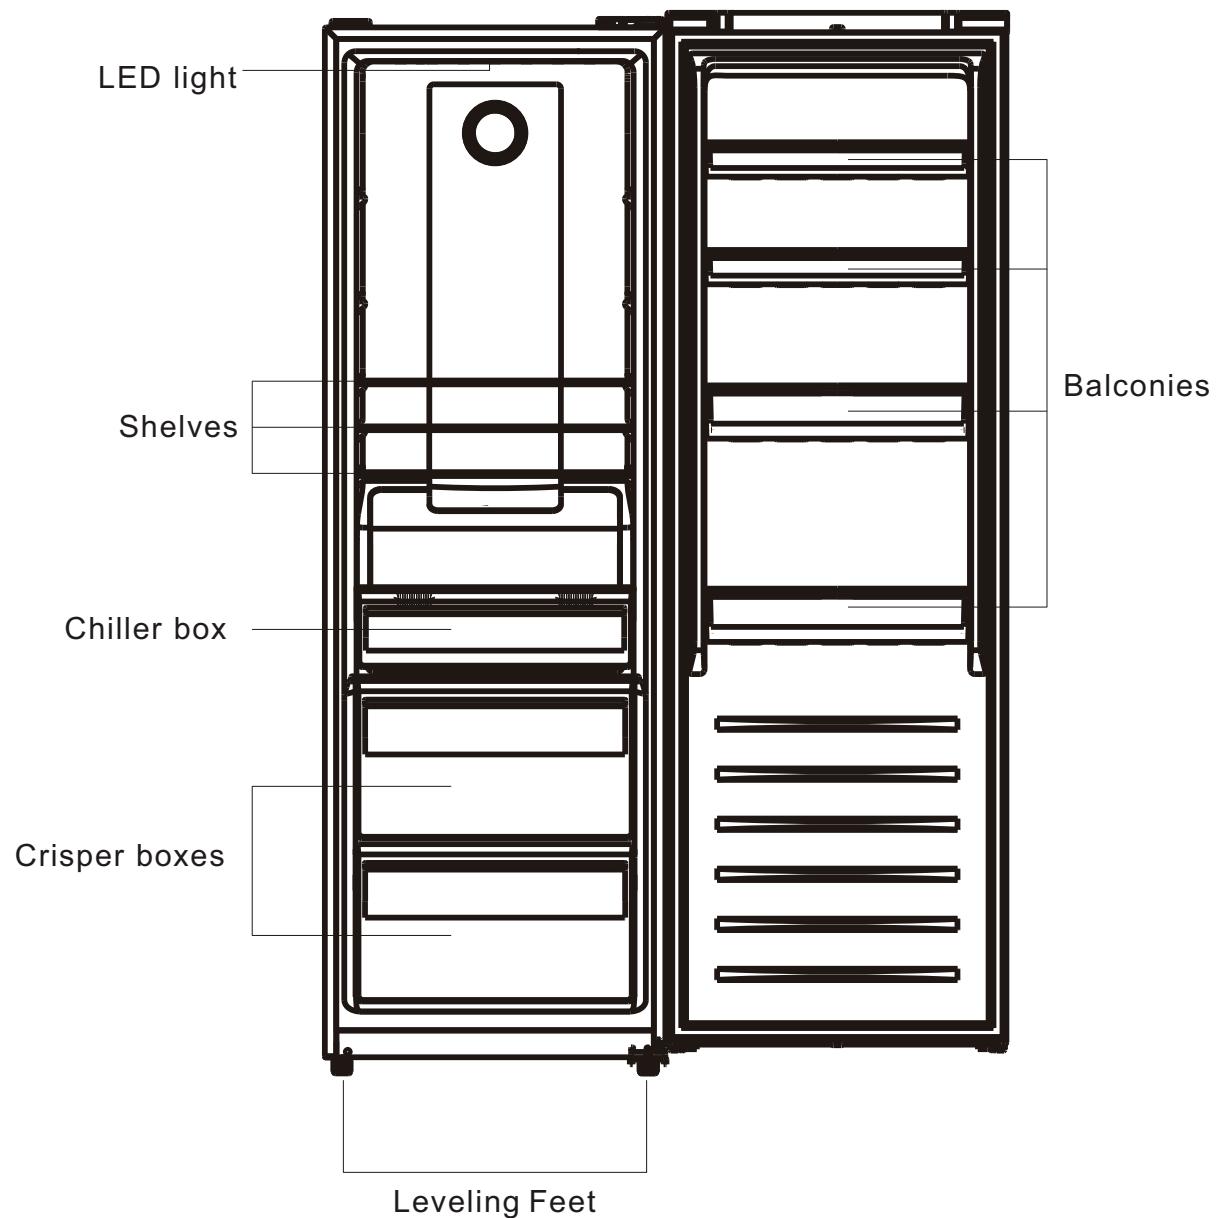

Note: This diagram is for reference only, the actual product may differ slightly.

Installation

Space Requirement

- Select a location without direct exposure to sunlight.
- Select a location with enough space for the refrigerator doors to open easily.
- Select a location with level (or nearly level) flooring.
- Allow sufficient space to install the freezer on a flat surface.
- Allow clearance to the right, left, back and top when installing. This will help reduce power consumption and keep your energy bills lower.
- If either the left- or right-hand side of the freezer is positioned against a wall, or cabinets that are of a similar height, it is strongly recommended to keep at least a 50mm gap at both sides and at the back of the freezer to aid ventilation.

Positioning

Install this appliance in a location where the ambient temperature corresponds to the climate class indicated on the rating plate of the appliance:

- Extended Temperate: this refrigerating appliance is intended to be used at ambient temperatures ranging from 10°C to 32°C; (SN)
- Temperate: this refrigerating appliance is intended to be used at ambient temperatures ranging from 16°C to 32°C; (N)
- Subtropical: this refrigerating appliance is intended to be used at ambient temperatures ranging from 16°C to 38°C; (ST)
- Tropical: this refrigerating appliance is intended to be used at ambient temperatures ranging from 16°C to 43°C; (T)

Location

The appliance should be installed well away from sources of heat such as radiators, boilers, direct sunlight etc. Ensure that air can circulate freely around the back of the cabinet.

Installation

To ensure best performance, if the appliance is positioned below an overhanging wall unit, the minimum distance between the top of the cabinet and the wall unit must be at least 50mm.

Ideally, however, the appliance should not be positioned below overhanging wall units. Accurate levelling is ensured by one or more adjustable feet at the base of the cabinet.

This refrigerating appliance is not intended to be used as a built-in appliance.

WARNING!

It must be possible to disconnect the appliance from the mains power supply; the plug must therefore be easily accessible after installation.


Electrical Connection

Before plugging in, ensure that the voltage and frequency shown on the rating plate correspond to your domestic power supply. The appliance must be earthed.

The power supply cable plug is provided with a contact for this purpose. If the domestic power supply socket is not earthed, connect the appliance to a separate earth in compliance with current regulations, consulting a qualified electrician. The manufacturer declines all responsibility if the above safety precautions are not observed.


Door Reversibility

Before reversing the door, please be prepared with the below tools and materials: straight screwdriver, cross screwdriver, spanner and components included in the poly bag.

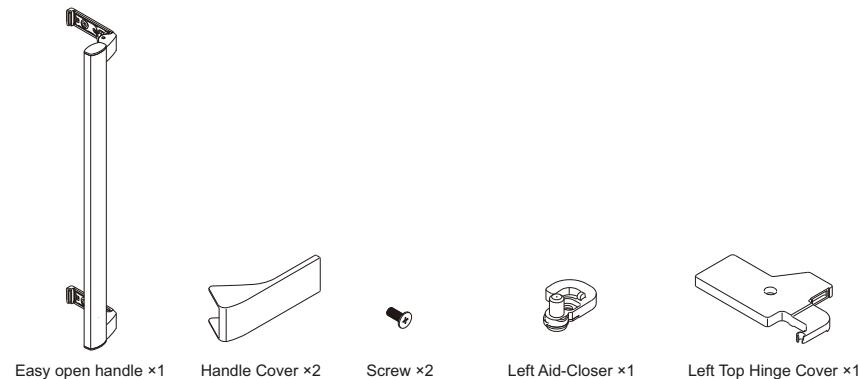


Installation


1. Remove upper wire box covers.

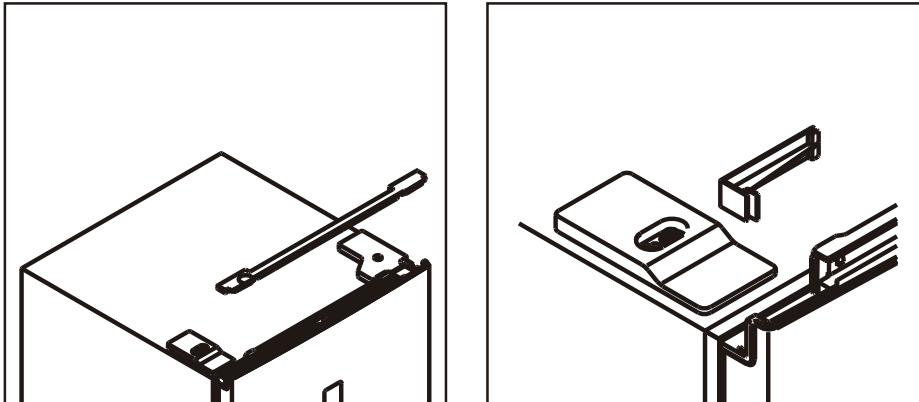

2. Unscrew right top hinge cover, and disconnect connectors of door switch and display.

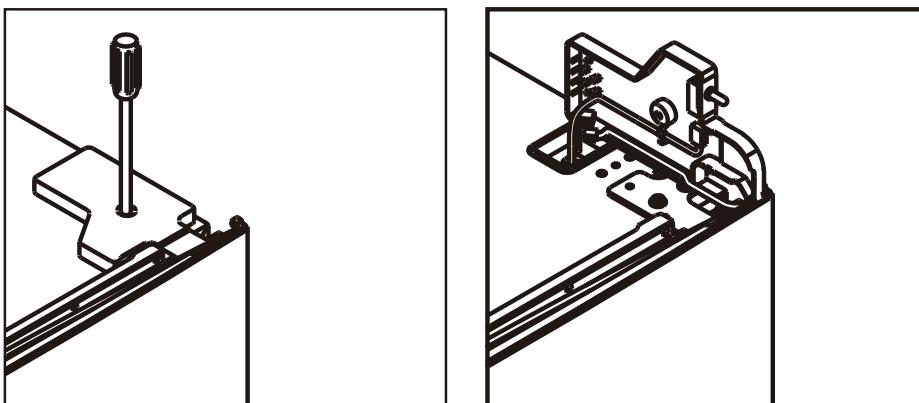


3. Unscrew and remove the top hinge, and then remove the door.

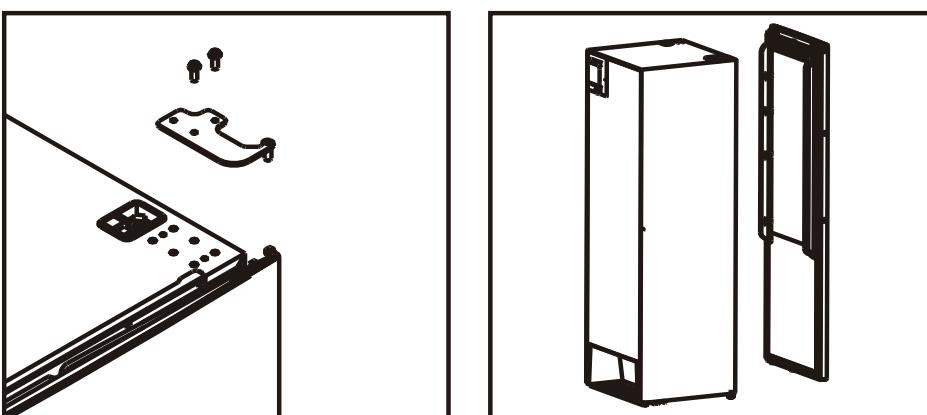


Installation


4. Remove the right aid-closer, and take out left aid-closer from accessories bag and install it at left side.

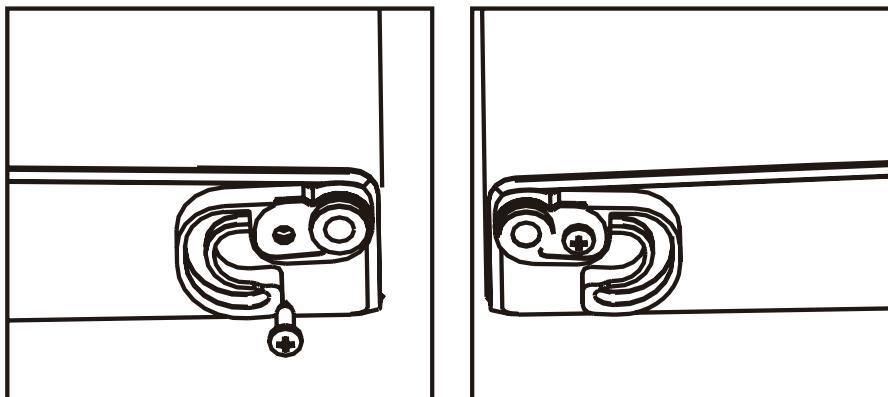

5. Unscrew the bottom hinge, and remove the adjustable foot from the left side to the right side.

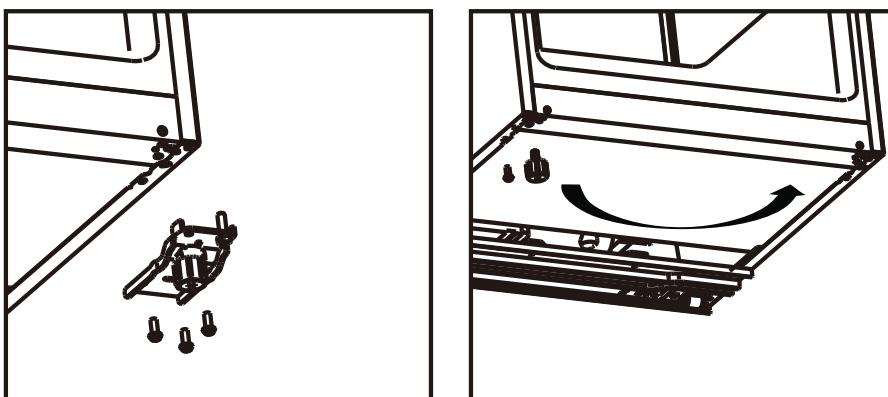


6. Unscrew and move the bottom hinge pin from the right side to the left side, then install the bottom hinge on the left side of the appliance.

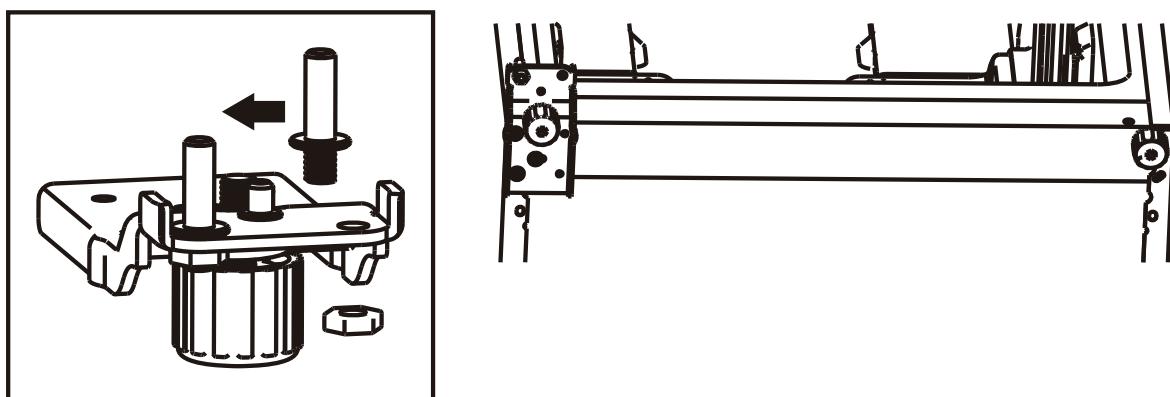


Installation


7.Unscrew and move the top hinge pin from bottom side to upper side. Remove door switch from right hinge and then install it in left hinge cover which is placed in accessory bag.

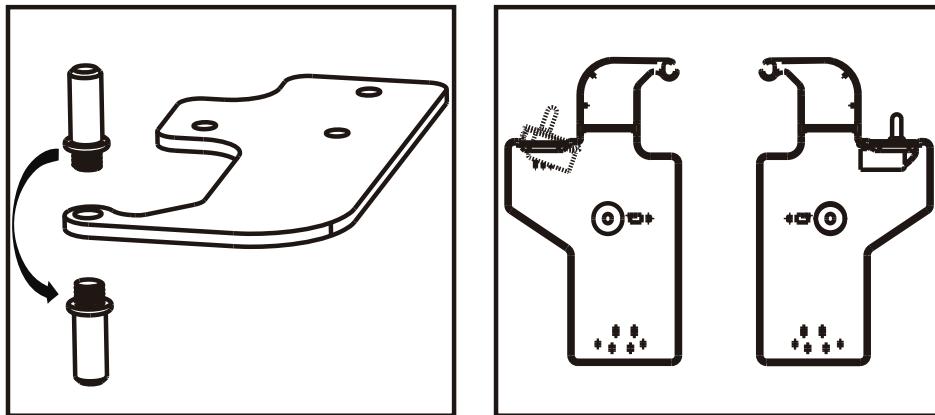

8.Unscrew and move the top decorative cover on the left side, and install it on the right side.

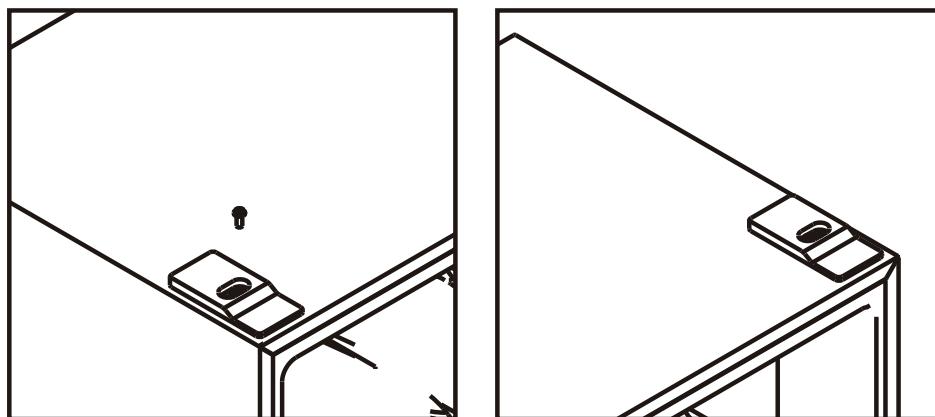


9.Detach the freezer door gasket and attach it to the door after rotating 180 degree.

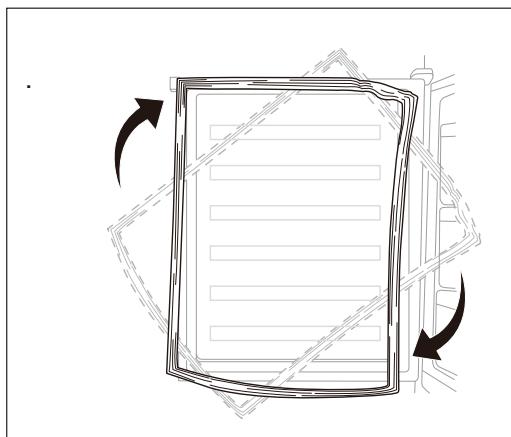


Installation


F. Install the door, and then move the connecting wires from right side to left side.

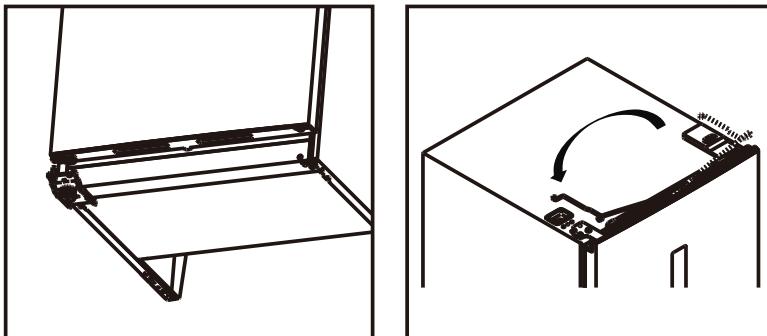


1F. Install the top hinge to the left side, please slightly adjust the top hinge while installing to make sure gasket is well sealed.

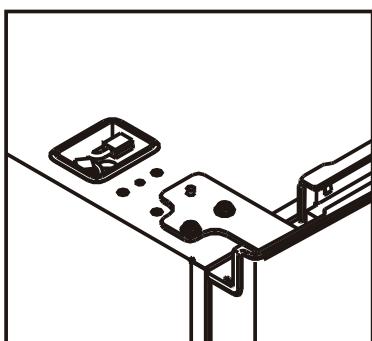

1G Connect connectors of door switch and display, and install the left top hinge cover.

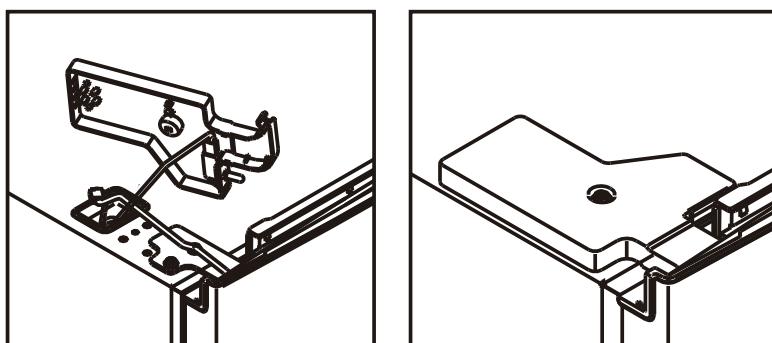


1H Install the upper wire box covers to the right side.

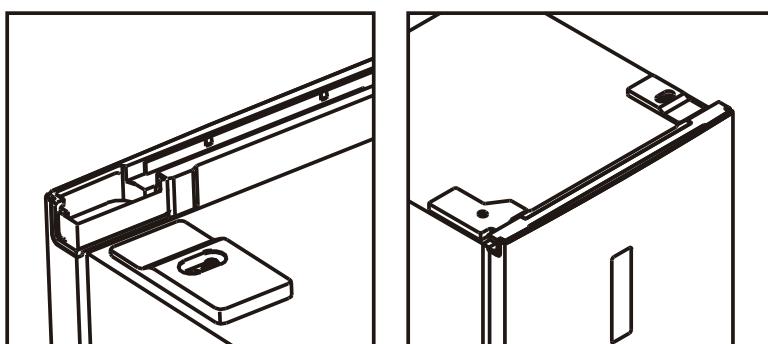


Installation

Easy open handle installation


1. Remove the screw hole covers.

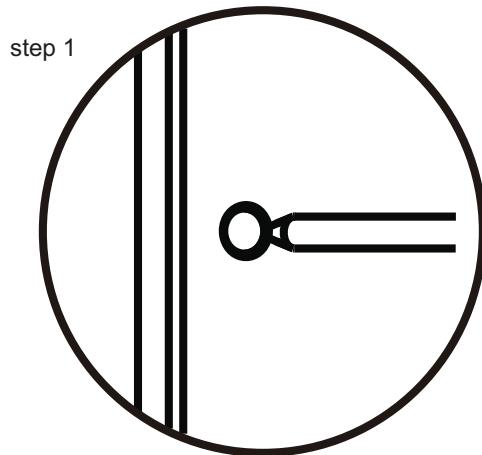

2. Take out the easy open handle which is placed in crisper drawer, and install it.

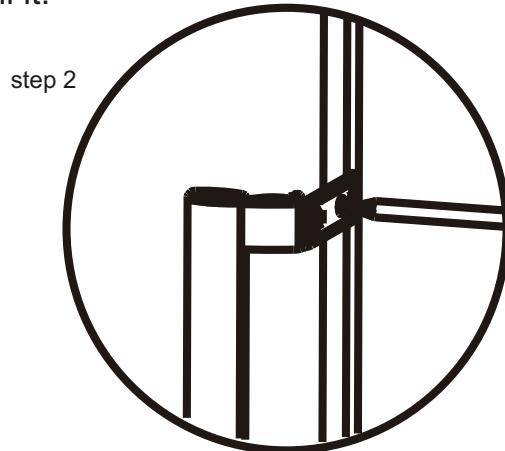


3. Install the easy open handle covers.

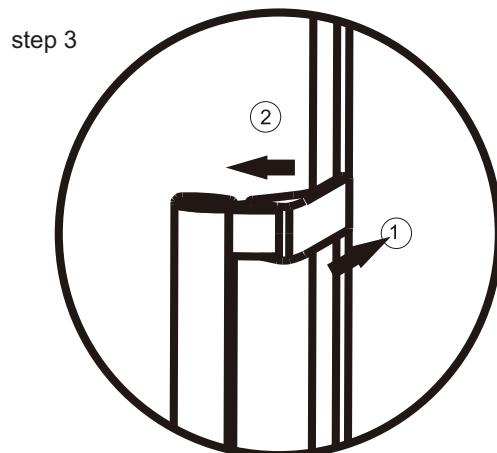

Installation


Space Requirement

- Keep enough space for the door to open.
- If either the left- or right-hand side of the freezer is positioned against a wall, or cabinets that are of a similar height, it is strongly recommended to keep at least a 50mm gap at both sides and at the back of the fridge freezer to aid ventilation.

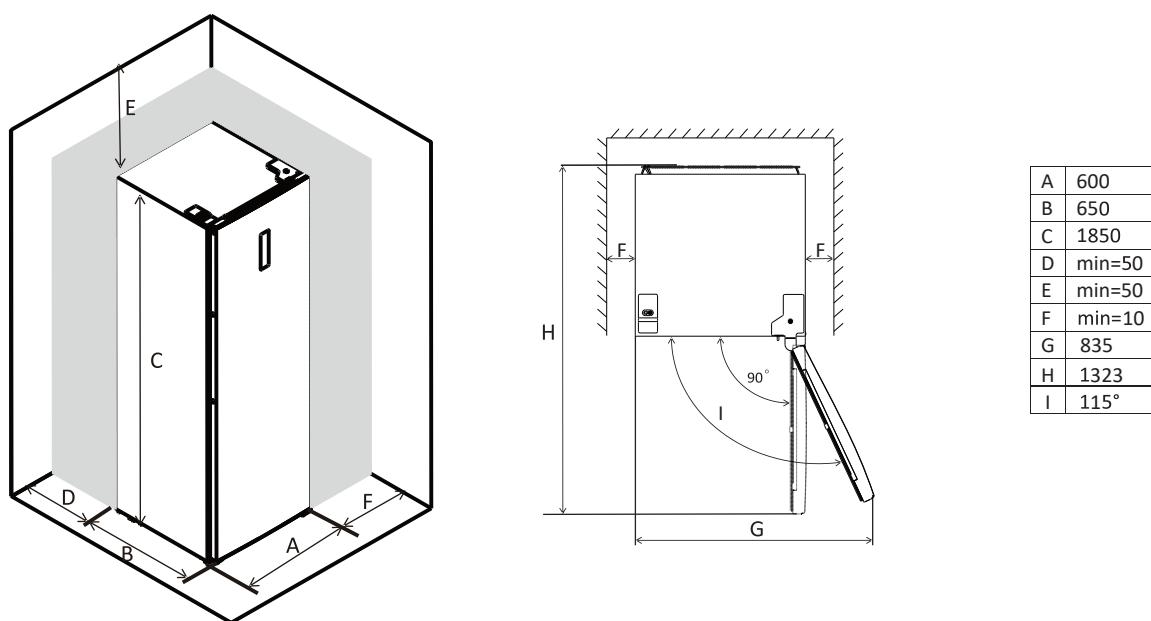


Levelling the Unit

- To do this, adjust the two levelling feet at the front of the unit.
- If the unit is not level, the doors and magnetic seal alignments will not be covered properly.

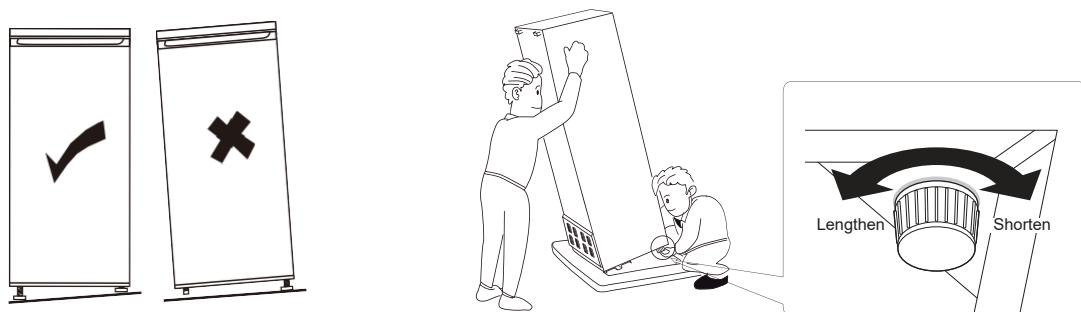

User Control Panel

1.0 User interface introduction

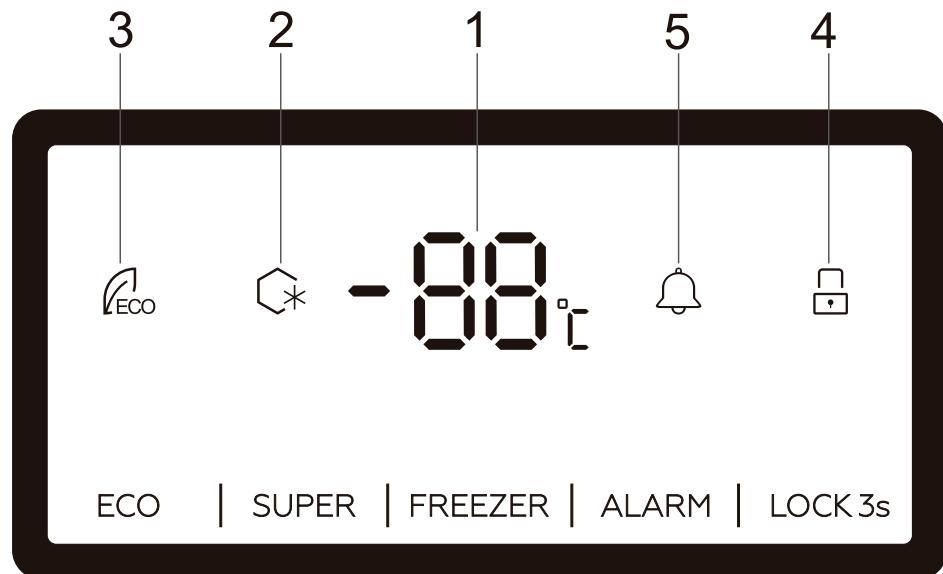

1.1 Operation buttons

FREEZER: Temperature control of the appliance

SUPER: Select and deselect super mode

ECO: Energy saving mode

LOCK 3s: Lock the control panel for 3 seconds

ALARM: Turn the alarm on or off

BELL: Turn the bell on or off

1.2 LED display

1. Display window for preset temperature

2. Super mode icon

3. ECO mode icon

4. Locking and unlocking icon

5. Alarm icon

2.0 Illustration of the buttons

All buttons are valid only in unlocking status.

Short beep after per touching of buttons.

User Control Panel

2.1 FREEZER: Temperature control of the the appliance

Available only for user defined mode. Touching "FREEZER" button consecutively, the temperature will change from -14°C to -22°C , stop touching and after 5 seconds flashing, the temperature is set.

2.2 SUPER: select and deselect super mode

Press "**SUPER**" button to select super mode. After 5 seconds flashing of super mode icon, super mode is selected. This mode is designed to freeze the food quicker.

When super mode is selected, super mode icon will light on, and display window will show -25°C.

In super mode, touching "**FREEZER**" button, super mode icon will flash 3 times, but freezer temperature can not be changed.

To exit Super mode,

- Press "**SUPER**" button to deselect Super mode,
- Or after 3 hours of super mode without any operation, the appliance will automatically enter to previous setting.

Warning:

In super mode, noise of the appliance may be slightly higher than normal running.

2.3 ALARM: clear opening alarm and high temperature alarm

Short touching "**ALARM**" button to clear opening alarm and high temperature alarm.

2.4 ECO select and deselect ECO mode

Touching "**ECO**" button to select ECO mode. After 5 seconds flashing of ECO mode icon, ECO mode is selected. This mode can help reduce power consumption.

When ECO mode is selected, ECO mode icon will light on, and display window will show different preset temperatures, depending on the ambient temperature (T_a) of whether the appliance placed

Ambient Temperature (T_a)	$T_a \leq 13^\circ\text{C}$	$14^\circ\text{C} < T_a \leq 20^\circ\text{C}$	$21^\circ\text{C} < T_a \leq 27^\circ\text{C}$	$28^\circ\text{C} < T_a \leq 34^\circ\text{C}$	$T_a > 35^\circ\text{C}$
Preset Temperature	-18°C	-18°C	-18°C	-16°C	-15°C

In ECO mode, "**FREEZER**" button will not respond to any touching.

Short touching "**FREEZER**" button to deselect ECO mode.

User Control Panel

2.5 LOCK: Locking and unlocking

Touching "LOCK" button for 3 seconds to lock the control panel, then the locking and unlocking icon will be "  ".

In locking status, touch any button, the locking and unlocking icon will flash 3 times.

Touching "LOCK" button for 3 seconds to unlock the control panel, then the locking and unlocking icon will be "  ".

3.0 Door opening alarm

If the door keeps opening for 90 seconds, door opening alarm sounds.

Close the door to stop the door opening alarm.

Or short touching "ALARM" button to clear door opening alarm.

4.0 High temperature alarm

If high internal temperature of the appliance is detected, high temperature alarm will sound, "ht" and detected temperature will display alternatively on display window.

Short touching "ALARM" button to stop door opening alarm.

High temperature display will disappear automatically only if detected temperature goes back to normal.

Daily Use

First Use

Cleaning the Interior

Before using the appliance for the first time, wash the interior and all internal accessories with lukewarm water and some neutral soap to remove the typical smell of a brand-new product, then dry thoroughly.

IMPORTANT! Do not use detergents or abrasive powders, as these will damage the finish.

Compartment	Type of Food
Freezer drawer(s)/shelves	<ul style="list-style-type: none">• Foods for long-term storage.• Bottom drawer/shelf for raw meat, poultry, fish. Middle drawer/shelf for frozen vegetables, chips.• Top drawer/shelf for ice cream, frozen fruit, frozen baked goods.

Storing Frozen Food

- When first starting-up or after a period out of use, before putting the product in the compartment let the appliance run at least 2 hours on the higher settings.
- **IMPORTANT!** In the event of accidental defrosting, do not refreeze defrosted food.


Thawing

- Deep-frozen or frozen food, prior to being used, can be thawed in the fridge compartment or at room temperature, depending on the time available for this operation.
- Small pieces may even be cooked still frozen, directly from the freezer. In this case, cooking will take longer.

Daily Use


Movable Shelves

- The walls of the refrigerator are equipped with a series of runners so that the shelves can be positioned as desired.

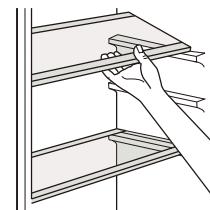


Positioning the Door Balconies

- Door balconies can be removed for cleaning.
Remove as follows: gradually pull the balcony in the direction of the arrows until it comes free.
- After cleaning, reposition them.

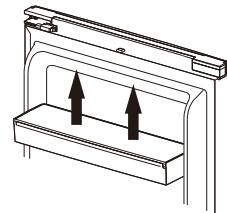

Disassemble the bottom drawer

- Pull out the bottom drawer to stopper position.
- Push up the elastic buckles on both sides of the bottom drawer.
- Pull out the bottom drawer.

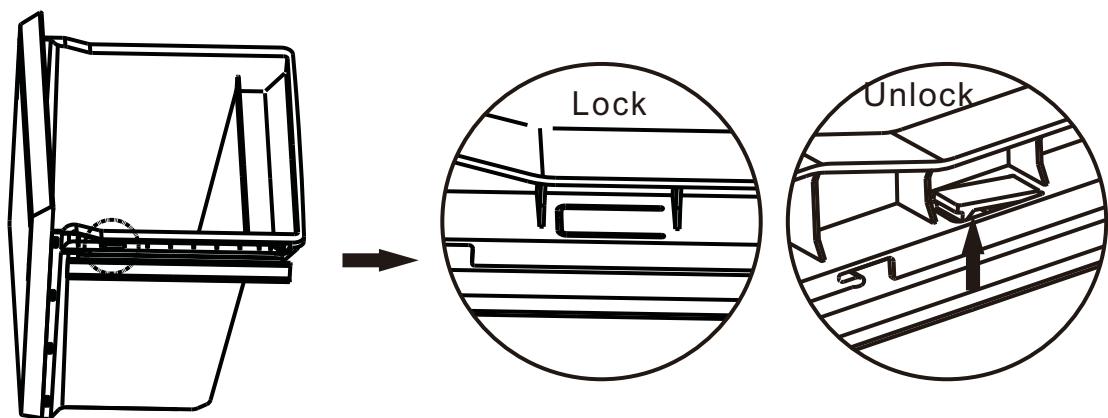

Daily Use

Helpful Tips

Tips for Freezing

To help you make the most of the freezing process, here are some useful tips:

- The maximum quantity of food which can be frozen in 24 hours is shown on the rating plate.
- The freezing process takes 24 hours. No further food to be frozen should be added during this period.
- Only freeze top quality, fresh and thoroughly cleaned foodstuffs.
- Prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible subsequently to thaw only the quantity required.
- Wrap up the food in aluminium foil or polythene and make sure that the packages are airtight.
- Do not allow fresh, unfrozen food to touch food which is already frozen to avoid a rise in temperature of the latter.
- Lean foods store better and longer than fatty ones. Salt reduces the storage life of food.
- Putting ice cubes or other frozen items directly on the skin may cause freeze burning on the skin.
- It is advisable to show the date of freezing on each individual pack to enable you to remove it from the freezer compartment before expiry.

Tips for Storage of Frozen Food

To obtain the best performance from this appliance, you should:

- make sure that commercially frozen foodstuffs are adequately packed.
- be sure that frozen foodstuffs are transferred from the food store to the freezer in the shortest possible time.
- not open the door frequently or leave it open longer than necessary.
Once defrosted, food deteriorates rapidly and cannot be refrozen.
- do not exceed the storage period indicated by the food manufacturer.

Daily Use

Cleaning

For hygienic reasons the appliance interior, including interior accessories, should be cleaned regularly.



Caution! Disconnect the appliance from the mains during cleaning.

Danger of electrical shock! Never clean the appliance with a steam cleaner. Moisture could accumulate in electrical components. Hot vapours can lead to the damage of plastic parts. The appliance must be dry before it is placed back into service.

IMPORTANT! Ethereal oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from orange peel, butyric acid, cleanser that contains acetic acid.

- Do not allow such substances to come into contact the appliance parts.
- Do not use any abrasive cleaners.
- Remove the food from the freezer and store in a cool place, well covered.
- Switch the appliance off and remove the plug from the mains or switch off or turn out the circuit breaker or fuse.
- Clean the appliance and the interior accessories with a cloth and lukewarm water. After cleaning, wipe with fresh water and rub dry. After everything is dry, place the appliance back into service.

Replace the lamp

- The internal light is a LED type with an energy rating of G class. To replace the lamp, please contact qualified technician.

Daily Use

Troubleshooting



Caution! Before troubleshooting, disconnect the power supply. Only a qualified electrician or competent person must carry out troubleshooting that is not in this manual.

Problem	Possible Causes	Solution
The appliance is not working	Mains plug is not plugged in or is loose.	Insert mains plug.
	Fuse has blown or is defective.	Check fuse and replace if necessary.
	Socket is defective.	Mains malfunctions are to be corrected by an electrician.
The appliance freezes too much	The temperature is set too cold or the appliance is running on the SUPER setting.	Set temperature warmer.
The food is not frozen enough	Temperature is not properly adjusted.	Please look in the initial Temperature Setting section.
	Door was open for an extended period.	Open the door only as long as is necessary.
	A large quantity of warm food was placed in the appliance within the last 24 hours.	Turn the temperature regulation to a colder setting temporarily.
	The appliance is near a heat source.	Please look in the Installation section.
Heavy build up of frost on the door seal	Door seal is not airtight.	Carefully warm the leaking sections of the door seal with a hair dryer (on a cool setting). At the same time, shape the warmed door seal by hand such that it sits correctly.

Daily Use

Unusual noises	Appliance is not level.	Re-adjust the feet.
	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A component, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall.	If necessary, carefully bend the component out of the way.

IMPORTANT! There are some sounds during normal use (compressor, refrigerant circulation).

If the problem occurs again, contact the Iceking Service Helpline. The number is on the front page of this manual. Please refer to the rating plate for the information that they will require to help you quickly.

Guarantee

YOUR 2 YEAR MANUFACTURER'S GUARANTEE

THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS

Your new ICEKING appliance carries a free guarantee which protects you against the cost of repairs during the first 24 months from date of purchase provided that any claim is accompanied by evidence of the model reference, model serial number and proof of purchase, such as a Sales Receipt, showing that the appliance was purchased within the 24 months prior to the date of claim.

YOUR GUARANTEE IS VALID ONLY IN THE UK & REPUBLIC OF IRELAND

To register your appliance simply complete the card in your appliance pack and return it with a stamp affixed or *alternatively* you can register online at www.repairtechuk.com

Service Helpline

Should your appliance develop a fault, please call the Iceking Service Helpline on:

01527 888133

Please remember to have all your product details available, including the model number, serial number, date of purchase and your retailer's details before registering a fault.

Your service call cannot progress without this information.

WHAT IS NOT COVERED UNDER THE GUARANTEE:

- Any appliance not correctly installed and operated in accordance with the manufacturer's instructions
- Any appliance that is used for anything other than domestic purposes.
- Any defect caused by accident, misuse, unauthorized modification or in expert repair.

Guarantee

- Cost of callout where a fault cannot be found with the appliance.
- Cost of callout for work covering routine maintenance, such as, but not exclusively, cleaning of filters or defrosting.
- Cost of callout for work required to correct the alignment of doors following door reversal procedures carried out by you.
- Use of the appliance by anyone other than the Householder.
- Use in any commercial environment.
- Consumable items, such as, but not exclusively, fuses in plugs, bulbs and breakable items which require routine replacement.
- Repair costs incurred that have not been authorised by Repairtech and/or carried out by a non-approved Repairtech engineer.