



Installation and Operating Instructions

ICE-RZ110W.E

48cm Under Counter Freezer



Please, read these instructions carefully before attempting to install or use this appliance. It is advisable to keep these instructions in a safe place for future reference.

Introduction

Thank-you for choosing this ICEKING appliance. It has been designed to give years of trouble-free use, provided it is installed and maintained correctly.

Included in these instructions is some important safety information, in addition to guidelines and recommendations, that will enable you to take full advantage of all the functions available.

This quality appliance has been tested and certified to meet all applicable UK electrical and safety standards.

This appliance must be installed and connected in accordance with current regulations by a qualified electrician.

After unpacking the appliance, ensure that there is no visible damage. If the appliance has been damaged during transit, do not use it, contact your retailer immediately.

Important

The manufacturer cannot be held responsible for injuries or losses caused by incorrect use or installation of this product. Please, note that we reserve the right to invalidate the guarantee supplied with this product following incorrect installation or misuse of the appliance.

This appliance is not designed to be used by people (including children) with reduced physical, sensorial, or mental capacity, or who lack experience or knowledge about it, unless they have had supervision or instructions on how to use the appliance by someone who is responsible for their safety.

Under no circumstances should any external covers be removed for servicing or maintenance, except by suitably qualified personnel.

What Is Not Covered Under the Guarantee

- Any appliance not correctly installed and operated in accordance with the manufacturer's instructions.
- Any appliance that is used for anything other than domestic purposes.
- Any defect caused by accident, misuse, unauthorized modification, or inexpert repair
- Cost of call-out where a fault cannot be found with the appliance.
- Cost of call-out for work covering routine maintenance, such as, but not exclusively, cleaning of filters or defrosting.
- Cost of call-out for work required to correct the alignment of doors following door reversal procedures carried out by the customer.
- Use of the appliance by anyone other than the householder.
- Use in any commercial environment.
- Consumable items, such as, but not exclusively, fuses in plugs, bulbs and breakable items which require routine replacement.
- Repair costs incurred that have not been authorised and/or carried out by an approved engineer.

Appliance information

Please, enter the details on the appliance rating plate below for reference, this will assist SIA Customer Care in the event of a fault with your appliance.

| | |
|----------------------|--|
| MODEL | |
| SERIAL NUMBER | |

EU Declarations of Conformity

This appliance has been designed, constructed, and marketed in compliance with safety requirements of EU Directive 2014/35/EU and requirements of EU Directive 2014/30/EU.

This appliance has been manufactured to the strictest standards and complies with all applicable legislation, including Electrical safety (LVD) and Electromagnetic interference compatibility (EMC). Parts of the item that will come into contact with food conform to 1934/2004/EC.

Disposal In Accordance with EC Directive 2012/19/EU

At the end of its working life, the product must not be disposed of as urban waste. The refrigeration system contains insulating gases and refrigerants, which require specialised waste disposal.


The valuable materials contained in this appliance can be recycled. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Before disposing of an old appliance, remove the door seals, latch, or bolt lock to avoid the risk of child entrapment.

Disposing of a household appliance separate from your unsorted waste avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources.

As a reminder of the need to dispose of household appliances correctly, the product is marked with a crossed-out wheeled dustbin.

Description of the Appliance

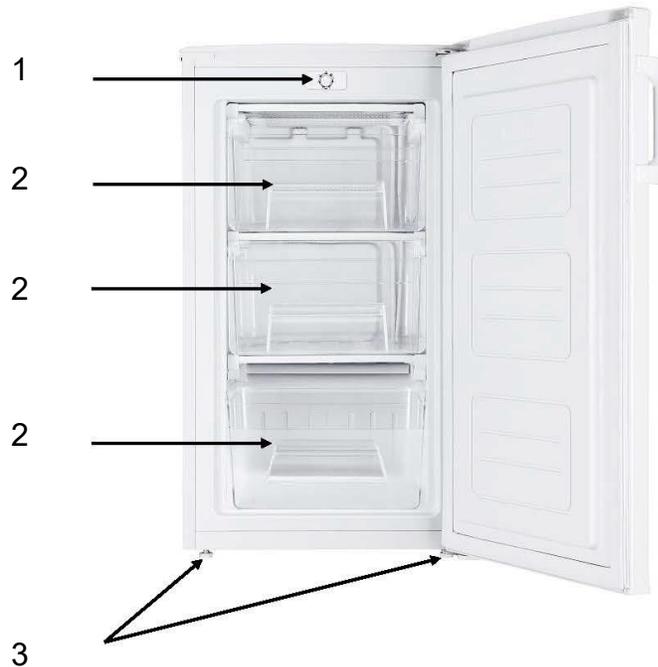

1. Adjustable Thermostat.
2. Storage Drawers.
3. Levelling Feet.

Please, note that your appliance may be supplied with the door left or right hand hinged. To reverse the door please refer to section 4.5.

(Picture shown for indicative purposes only, model supplied may differ).

Contents

1. Installation.
2. Safety Advice.
3. Operating the Appliance.
4. Maintenance.

Section 1

IMPORTANT! This appliance must be left to stand in an upright position for at least 4 hours before being switched on for the first time.

Remove all packaging and securing tape from the appliance.

Wash the interior of the appliance with lukewarm water containing a small amount of bicarbonate soda (5ml to 0.5 litres of water).

Position the appliance in a dry atmosphere and out of direct sunlight.

Do not position next to a cooker or other sources of heat, i.e., radiator.

If positioned next to another fridge or freezer, leave a minimum gap of 2cm between the appliances to avoid condensation.

A clearance of 50mm should be left above the appliance. If this cannot be achieved, you should ensure a clearance of 25mm is maintained on each side of the appliance.

Please ensure that there is a small 'air-gap' between the condenser on the rear of the appliance and the rear wall.

Do not place or store heavy items on the top of this appliance.

Ensure that the appliance is positioned on a firm flat floor.

This appliance must be level. Adjust the level by screwing the adjustable feet up or down (use your fingers or a suitable spanner).

Ensure that the appliance is upright and both feet are in firm contact with the floor so that the cabinet is stable.

Connect the plug to an adjacent 13amp socket outlet and ensure that the appliance is not standing on the supply cable.

Section 2

Please, read this booklet thoroughly before installing and switching on the appliance. The manufacturer accepts no responsibility for incorrect installation and usage.

If this appliance is to replace an old refrigerator with a lock, as a safety measure, break or remove the lock and/or door before disposal.

Your old appliances contain insulation gases and refrigerant that must be disposed of correctly. Please ensure that the refrigerant circuit is not damaged before the appliance is taken away for correct disposal in line with current legislation. If there is any doubt, contact your Local Authority for instructions.

This appliance may contain the refrigerant isobutene (R600a). This is a natural gas with a high level of environmental compatibility; however, caution is required as isobutene is a flammable gas. It is essential to ensure that refrigerant tubes are not damaged during transportation and the installation of the appliance. If the refrigerant circuit is damaged, avoid naked flames or sources of ignition and ventilate the room in which the appliance is situated.

Do not damage the refrigerant circuit.

Do not allow children to play with plastic bags – tear the bag(s) immediately and ensure that they are placed in a dustbin out of reach.

This appliance shall not be used by children aged 8 years and below, unless they have been given instruction on how to use of the appliance in a safe way. Children shall not play with the appliance.

If using an adaptor, this must be used in accordance with the manufacturer's instructions and ensure that the electrical circuit is not overloaded as this could cause overheating.

Do not twist or bend the cables and keep them away from hot surfaces.

Do not plug in or unplug this appliance with wet hands.

Following installation make sure that the power cable is not trapped underneath the appliance.

If the power supply cord is damaged, it must be replaced by the manufacturer, it's service agent or similarly qualified persons to avoid a hazard.

Section 3

3.1 Switching on the Appliance

- Allow the appliance to stand for a minimum of 4 hours after installation.
- Plug in the appliance and switch on at the mains supply.
- Set the thermostat control to the required setting as detailed in the Temperature Control section (3.2.).
- Leave the appliance for approximately 4 hours for the correct temperature to be reached.

3.2 Temperature Control

The temperature selector knob is located just behind the door on the front of the appliance (See 'Description of the Appliance' on page 3). Set the thermostat as follows:

- Setting "Min": Warmest Temperature.
- Setting "Normal or Mid": Normal Operation (adequate for most situations).
- Setting "Max": Coldest Temperature.

Important! During high ambient temperatures e.g., on hot summer days, it may be necessary to set the thermostat to the coldest setting (position 7).

This may cause the compressor to run continuously to maintain a low temperature in the cabinet.

3.3 Storing & Freezing Food in the Freezer

This appliance is a four-star freezer and is suitable for the long-term storage of frozen food items. It can also be used for freezing and storing fresh food items.

You should always follow the storage guidelines printed on each food producers packaging; however, the following information is provided as a general guide for the maximum storage life of frozen items:

- Fresh Meat and Poultry – up to 12 months.
- Cooker Meats – up to 2 months.
- Fresh Fish – up to 6 months.
- Fruit and Vegetables – up to 12 months.
- Bread and Cakes – up to 6 months.

3.4 Normal Operating Sounds

You may hear faint gurgling or bubbling sounds when the refrigerant is pumped to the cooling system and through the coils or tubing at the rear of the appliance.

When the compressor is in operation you may hear a slight whirring sound or pulsating noise. The thermostat controls the operation of the compressor, and you may hear a slight click as it cycles in and out.

3.5 Energy Saving Advice

Do not install the appliance close to sources of heat, such as a cooker, dishwasher, or radiator.

Locate the appliance in a cool well-ventilated room and make sure that the air vents are clear.

Try to avoid keeping the door open for a long time, warm air will enter the cabinet and may cause a buildup of ice as well as affecting the energy consumption. Ensure there are no obstructions preventing the door from closing properly.

Ensure that the door seal is clean and there are no tears or splits.

Do not put hot food into the freezer – let it cool down first.

3.6 In the Event of a Power Failure

If there is a power failure, keep the door closed. When the power has been restored the appliance will start to operate but it may take some time to achieve the pre-set operating temperature. Check the condition of your stored food items and liquids.

Section 4

Before any maintenance or cleaning work is carried out, DISCONNECT the appliance from the ELECTRICITY supply.

4.1 Internal Cleaning

Clean the interior and accessories with warm water and bicarbonate of soda (5ml to 0.5 litres of water). Rinse and dry thoroughly. Do not use detergents, abrasive powders, highly perfumed cleaning products, wax polishes or cleaning products containing bleach or alcohol.

4.2 External Cleaning

Wash the outer cabinet with warm soapy water. Do NOT use abrasive products. There may be sharp edges on the underside of the product, so care should be taken when cleaning. Once or twice a year dust the rear of the appliance and the compressor at the back of the appliance, with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause increased energy consumption.

4.3 Defrosting

It is advisable to carry out de-frosting when your frozen food stocks are minimal. Any frozen food that you do have inside the appliance should be wrapped in thick newspaper or stored in a cool bag whilst carrying out the defrost operation.

If ice buildup in the appliance exceeds 3-5mm, empty the contents and switch off the appliance, leave the door open and allow the ice to melt. Do not use sharp objects to scrape the ice away. Clean and dry the interior, close the door, and turn on the power to the appliance. When the power has been restored the appliance will start to operate but it may take some time to achieve the pre-set operating temperature.

4.4 When the Appliance Is Not in Use

When the appliance is not in use for long periods, remove the contents, disconnect from the electricity supply, and clean the appliance, leaving the door ajar until you wish to use the appliance again.

4.5 Reversing the Door

The door opening can be reversed from “right hand hinged” to “left hand hinged” if required. If your appliance is supplied “left hand hinged” simply reverse the following procedure.

- Remove screws from the top cover and lift away from the appliance.
- Lean the appliance back and prop it up securely at the front.
- Remove the bottom door hinge screws and remove the bracket.
- Remove the door from the upper hinge.
- Swap the upper door pin to the opposite side of the appliance.
- Insert the door onto the upper door pin.
- Secure the lower door hinge into place.
- Test that the door closes correctly and that the door seal is tight.
- Secure all the screws.
- Refit the top cover.

Warning! When reversing the door, the appliance must not be connected to the mains. Remove the plug from the mains beforehand. Service calls relating to door problems and/or cooling issues will be chargeable if the fault is found to be due to an incorrect door reversal procedure carried out by the consumer!

4.6 What to Do If Something Goes Wrong

There is no power to the appliance:

- Check there is not a power cut.
- Check there is power to the electric socket/appliance.
- Check the fuse in the plug (must be 13 amp).

The compressor runs continuously:

- Is the door closed correctly?
- Has a large amount of food recently been added to the appliance?
- Has the appliance door been opened frequently?
- Is the t/stat control set to maximum?

There is excessive frost/ice buildup:

- Ensure that the door has been closed correctly.
- Ensure that the door seal is clean and sealing correctly.

The appliance is making a noise:

- Refer to Normal Operating Sounds, section 3.4.
- Ensure that the appliance has been installed correctly, section 1.

Insurance

Warning! Any warranty provided with this product does not cover loss of fridge/freezer content. Any claim for loss, damage, costs, or expenses of an indirect or consequential nature including any economic loss or damage to foodstuffs or any other goods is excluded.

We recommend that you inspect your fridge/freezer regularly to check that it is working correctly, losses can result from deterioration following breakdown or accidental failure of the appliance, fuses, plugs or public electricity supply, these can be covered by your standard home insurance or might require extra cover. Please, check with your insurance provider.

Important Note

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product, or on the documents accompanying the product, the Crossed-Out Wheelie Bin, indicates that this appliance may not be treated as household waste. Instead, it shall be handed over to the applicable collection point for the recycling of electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery, and recycling of this product, please contact your local authority, your household waste disposal service, or the retailer where you purchased the product.



We continuously try to improve our products for the benefit of our customers.

For this reason, we reserve the right to make changes to any product at any time, without notice.